



Comfort Zone CZ6C Power Cable Replacement

Replace the power cable for your Comfort Zone CZ6C if your power cable is damaged or faulty.

Written By: Nishanth Dara



INTRODUCTION


Learn how to properly replace the power cable of your Comfort Zone CZ6C.





TOOLS:

- [Soldering Iron](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Desoldering Braid](#) (1)
 - [Lightweight Wire Strippers](#) (1)
-

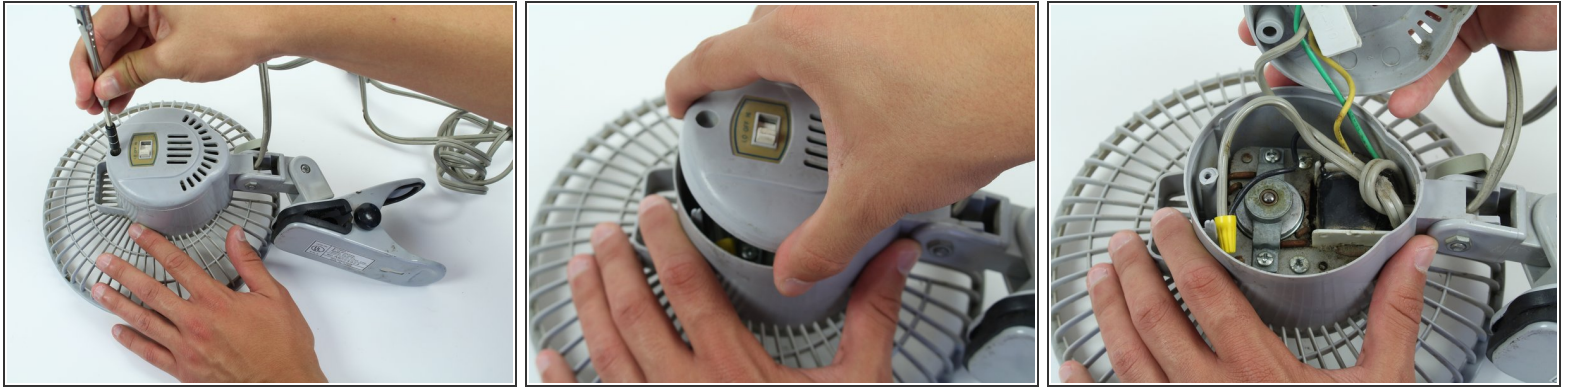Step 1 — Power Cable




 Make sure to unplug the Comfort Zone CZ6C before cutting any wires.

 Before attempting to replace your power cable, learn how to solder using the [How To Solder and Desolder Corrections Guide](#).


- Start with the fan on its back. Unscrew the back panel to expose the internal wiring.

Step 2

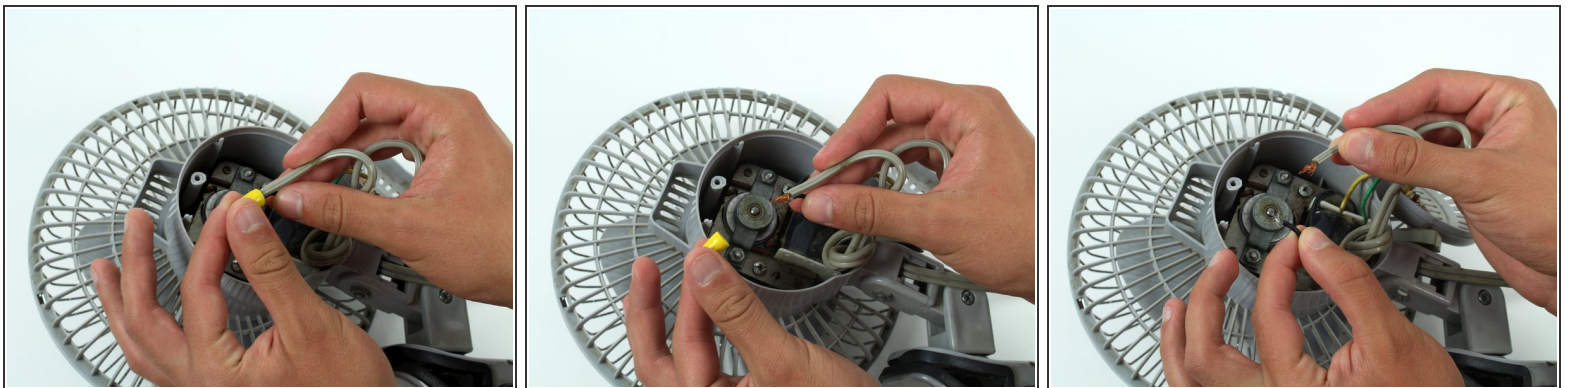


- Unscrew the yellow cap that connects the black wire and the gray power cord wire. Then, unwind the tied wires and pull them apart.


Step 3

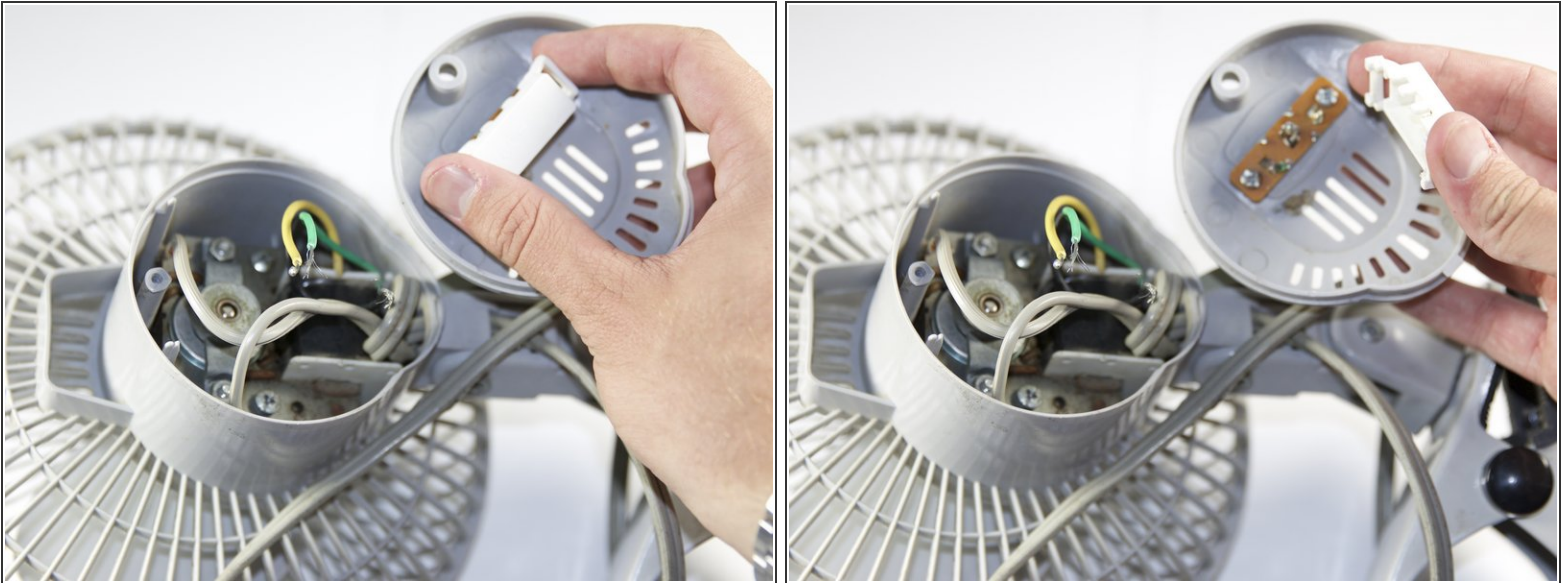


- Remove the plastic cover on the switch by pulling it apart from the back panel.

Step 4

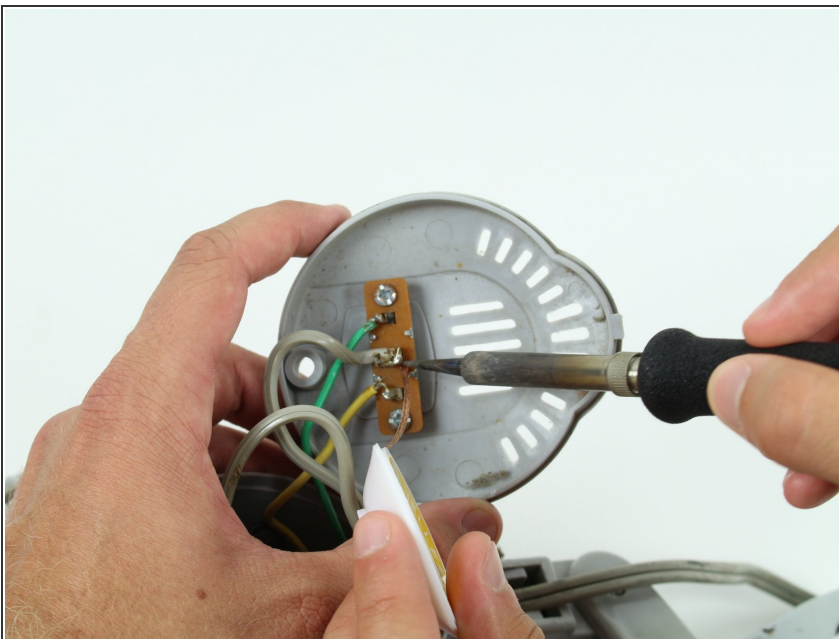


 Use the soldering iron with caution. Don't touch the tip of the soldering iron to avoid the risk of injury.

 This step can be made easier with the help of a partner to hold the wiring while you desolder the connection.

- Disconnect the gray power wire from the switch by desoldering the connection.

Step 5

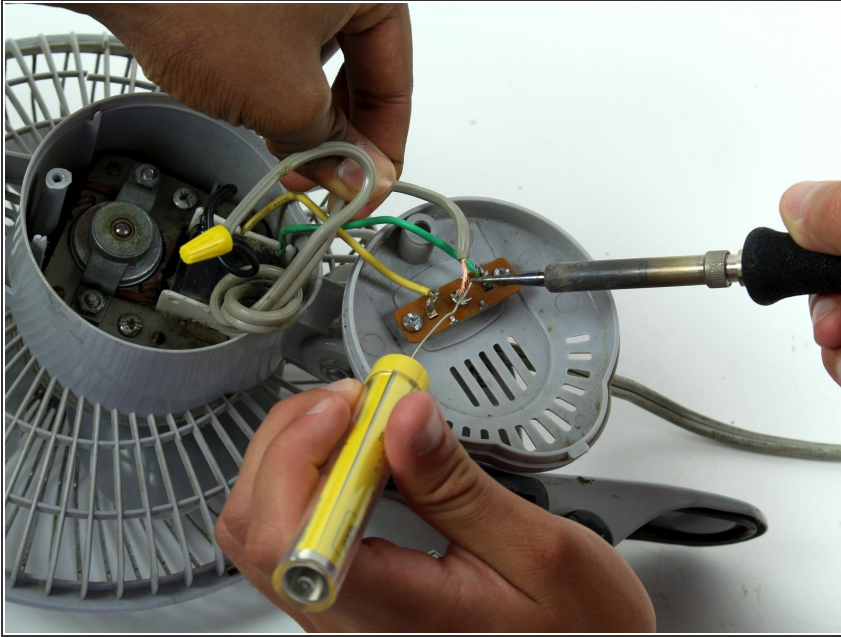

- Strip the end of the gray power cord.
- Then solder the end of the gray power cord to the switch.

To reassemble your device, follow these instructions in reverse order.