




De'Longhi EC155 Water Reservoir Replacement

Prerequisite Only

Written By: David Griffith



Step 1 — Water Reservoir

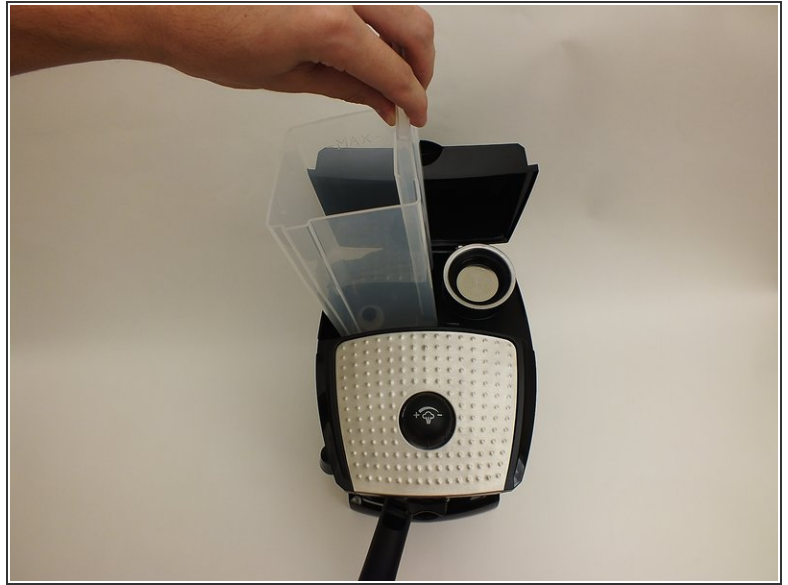

- Flip open the top panel to reveal water reservoir.
- Grab the water reservoir by the handle and lift out.

To reassemble your device, follow these instructions in reverse order.