


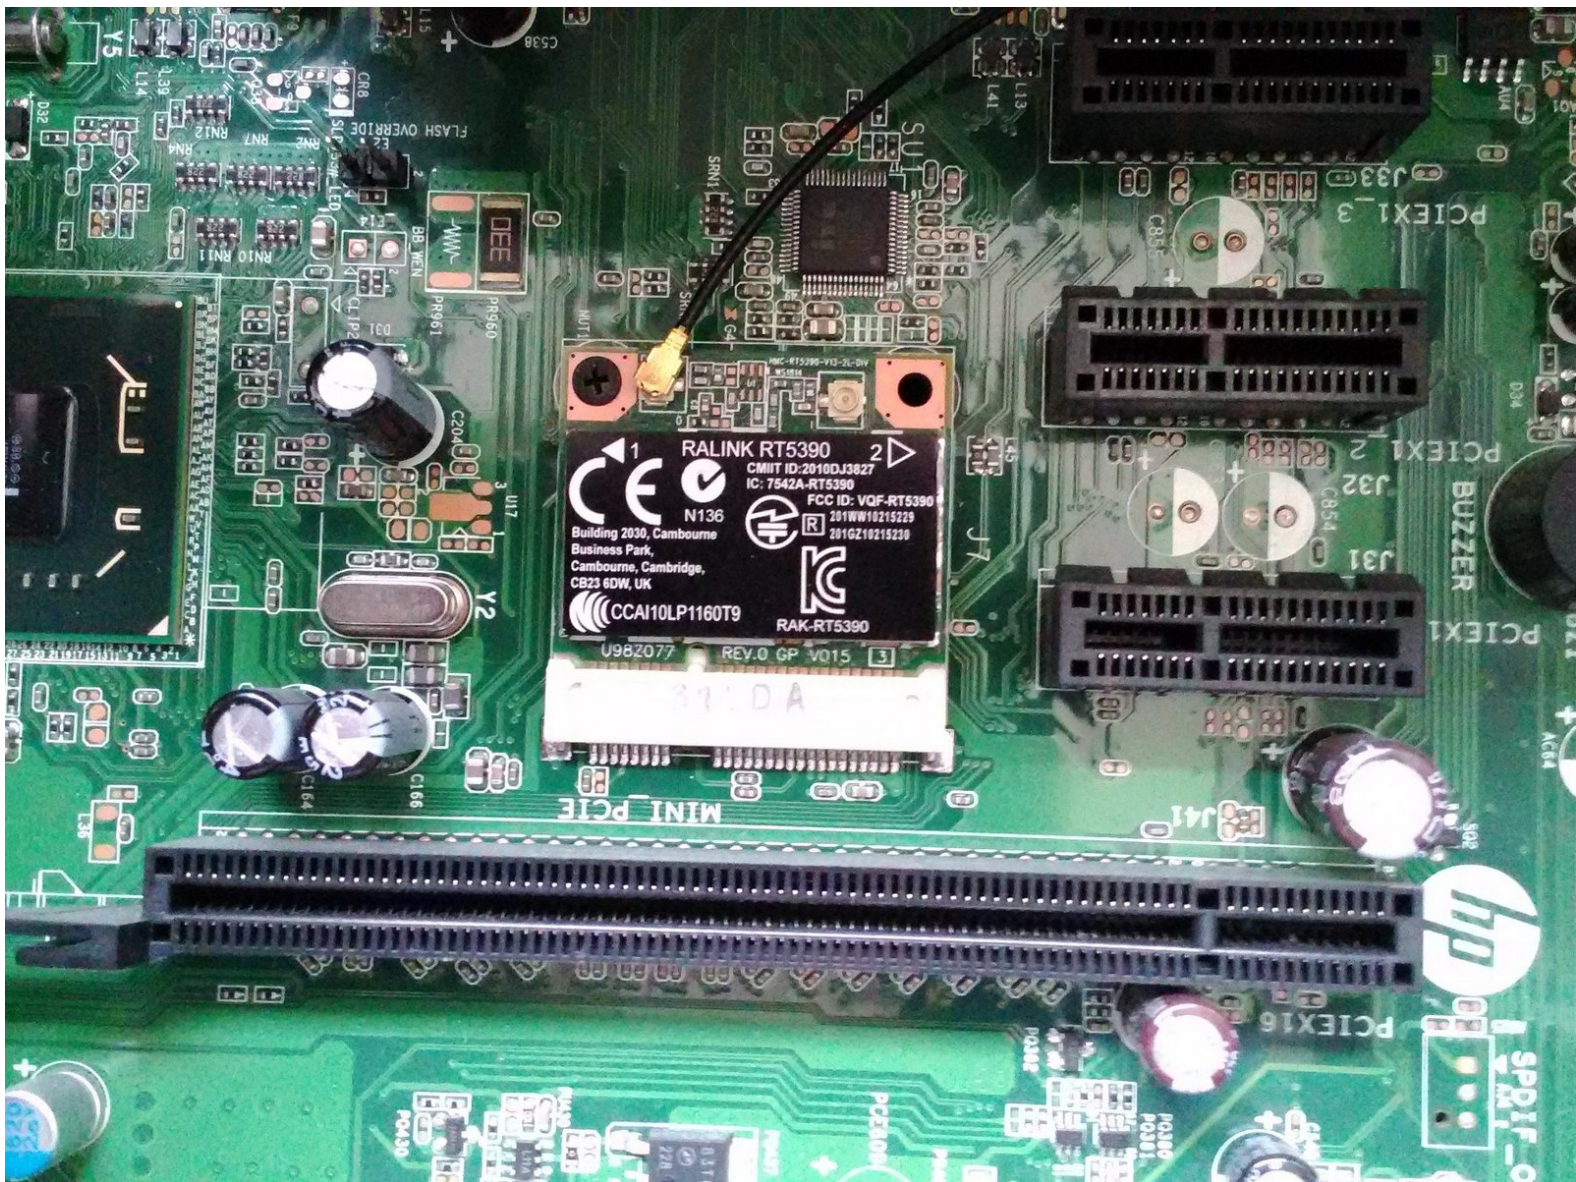

HP Pavilion p6 Wireless Card Replacement

How to remove and replace a faulty wireless card on a HP Pavilion p6 desktop computer.

Written By: Oli



INTRODUCTION

How to remove and replace a faulty wireless card on a HP Pavilion p6 desktop computer.







TOOLS:


- [Essential Electronics Toolkit](#) (1)
-




Step 1 — Side Panel Removal



-  Before you start make sure that all of the leads have been disconnected from the computer.
-  It is strongly recommended to wait at least 15 minutes after turning it off to allow the computer and internal components to cool down.
-  It is recommended to lay the computer down with the pull tab at the top to allow it to be easily opened.
-  It is also worth mentioning at this point that for complete safety when working inside the computer that wearing an anti-static band and touching a grounded metal object before starting is good practice.

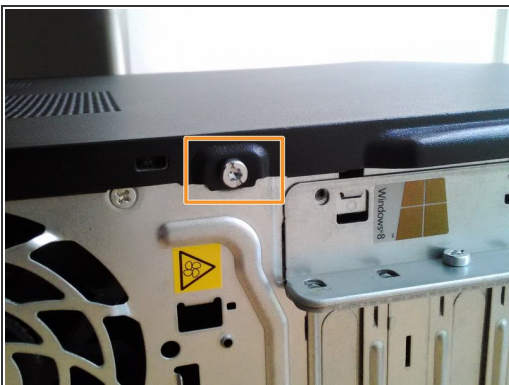
Step 2



-  In order to remove the side panel a single screw needs to first be removed.
-  The side panel can then be pulled towards the back of the computer using the pull tab provided.
-  The panel then needs to be rotated as shown in order to remove it from the computer.


This document was generated on 2020-11-16 07:44:24 AM (MST).

Step 3 — Wireless Card

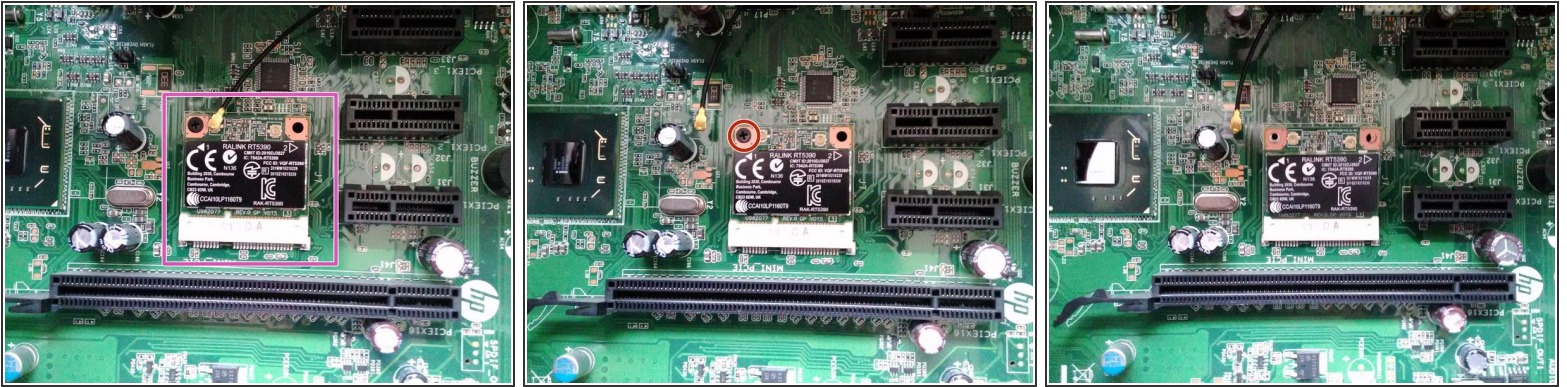

- First locate the wireless card, it should look like this.
- Next using a spudger or equivalent carefully pry the antenna cable off the wireless card, it should now look like the second picture.
- A single screw then needs to be removed in order to free the card.

Step 4

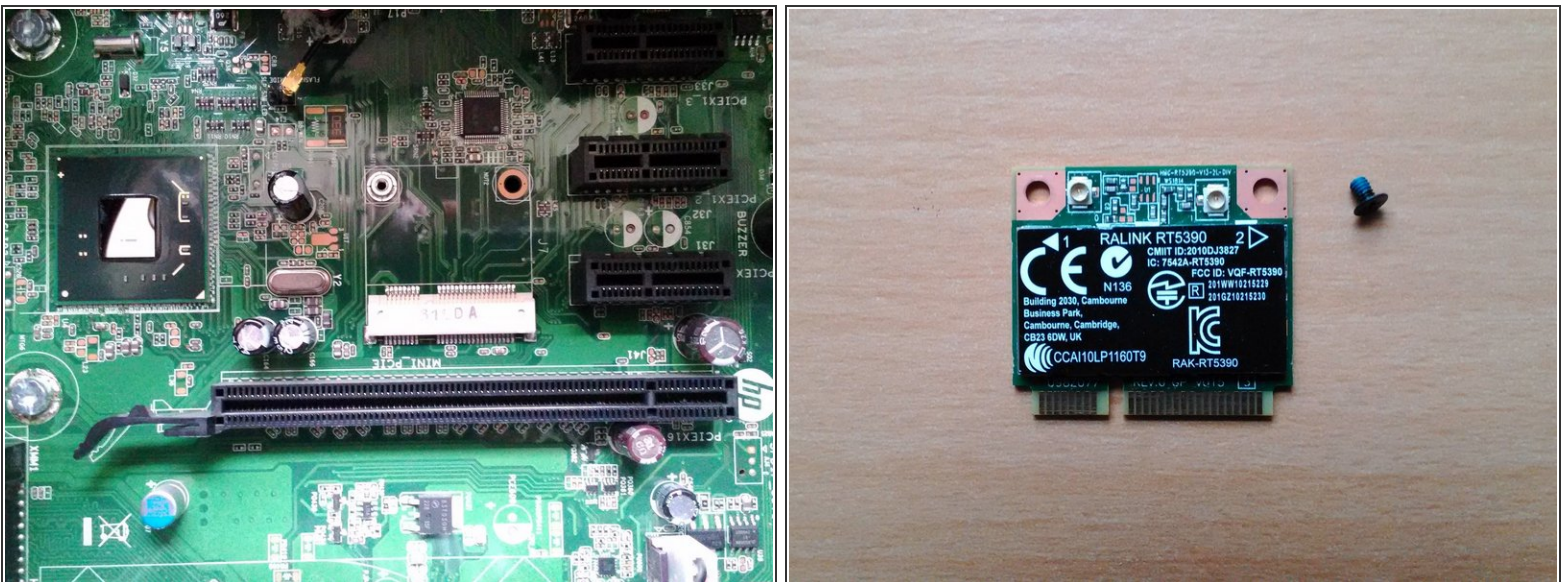

- The card can then just be easily removed by pulling it out and up.
- ☒ The wireless card should then be kept in a safe place and care taken not to lose the small screw that goes with it.

To reassemble your device, follow these instructions in reverse order.