



Palm m105 Button Board Replacement

In this guide you will learn how to remove the...

Written By: Erik Thompson



INTRODUCTION

In this guide you will learn how to remove the necessary parts to clean or replace the button board.

The Palm m105 is a device with several different parts. Maintenance takes less than ten minutes to complete.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
-

Step 1 — Button Board



- Begin with the Palm m105 facing you on a flat surface.

Step 2



- Remove protective screen cover by flipping up and pulling directly up from the top of the device.
- The two clips located on the protective screen will pop out.

Step 3




- Remove Faceplate. There is a tab right where the finger is located that needs to be pulled up.
- The Faceplate will then easily lift off.

Step 4



- Unscrew all four screws with the T-5 Torx screwdriver. There is one screw per corner. Turn counter clockwise to remove screws. The link to purchase this screwdriver is [Located here](#). Once you have removed all of the screws the device will be in three separate pieces (the back, the computer and the button board).
- Be careful because the power button is loose once you have performed this step.

Step 5

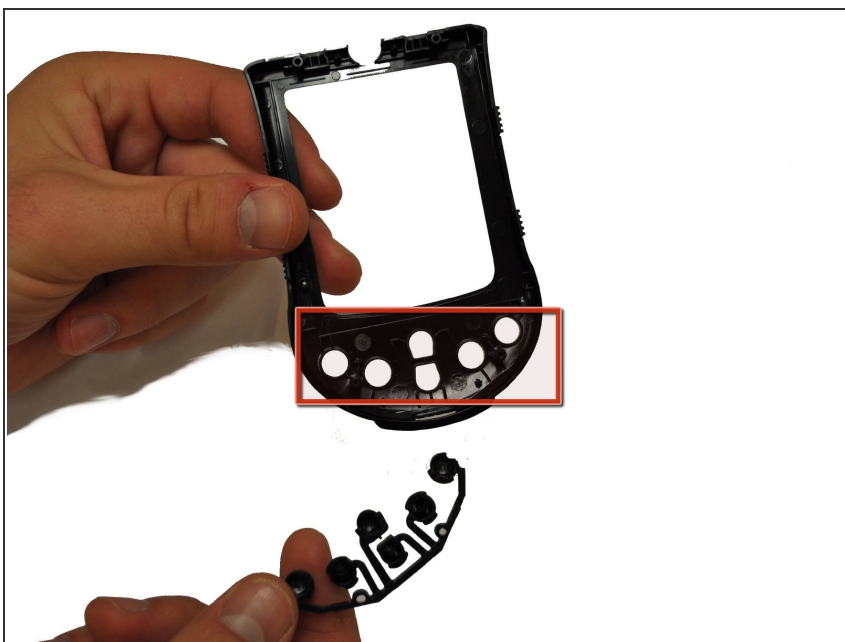

- You can see where the buttons were placed. To remove the buttons from the holder you need to push evenly on two buttons at a time, this will make them pop out easily. Once you have removed the buttons you can now wash or replace the buttons with new buttons.
- To replace the new buttons push them back the way they were and you should feel them click into place.

To reassemble your device, follow these instructions in reverse order.