



Motorola XOOM 2 Media Edition Touch Screen Replacement

Replace broken or malfunctioning touch screen to bring device back to working order.

Written By: Lacie Broten



INTRODUCTION

Do you have a cracked, shattered, or unresponsive touch screen? This guide will help you replace your screen! You will need to purchase a new screen before beginning.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T3 Torx Screwdriver](#) (1)
 - [T4 Torx Screwdriver](#) (1)
-


Step 1 — Motorola XOOM 2 Media Edition Disassembly




 Power off the device before beginning disassembly.

- Remove six 2.7mm Torx #3 screws.

Step 2

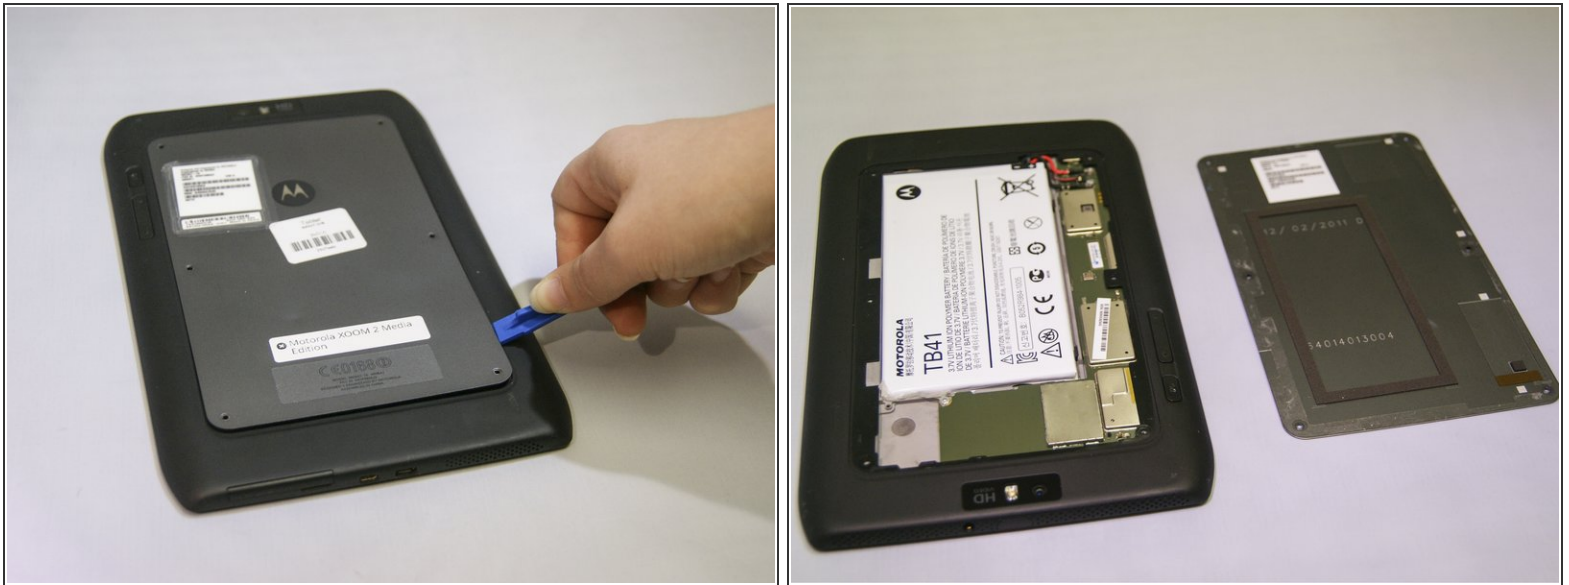

 There is adhesive attached to the underside of the back panel. Gradually lift the panel to avoid bending it out of shape.



- Pry off the back panel using a plastic opening tool.
- Using a plastic opening tool, slide the tool gently around the back cover to lift the cover off.

Step 3




- Pry off the black cover gradually using a plastic opening tool.

Step 4 — Touch Screen

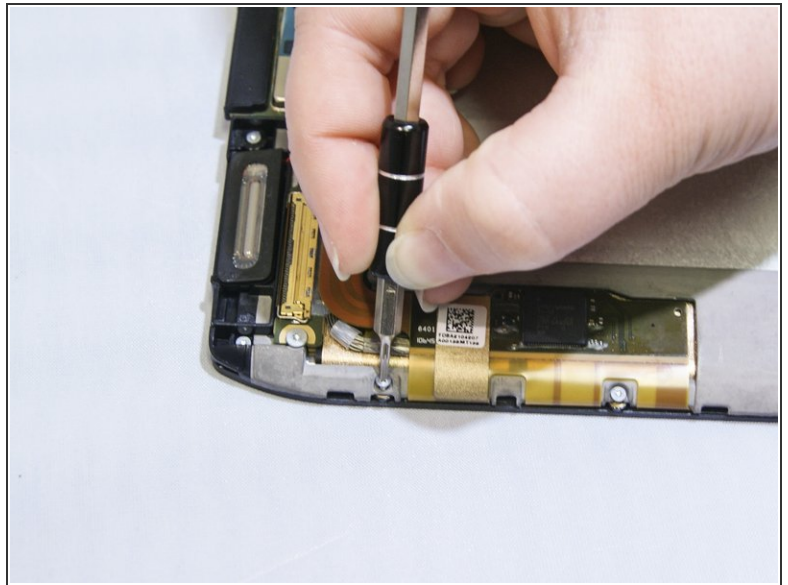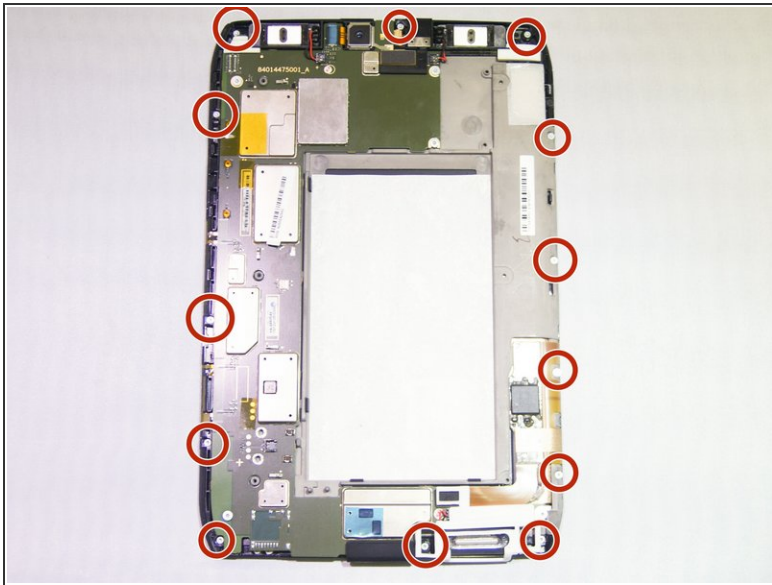


- Remove thirteen 2.55mm Torx #4 screws with Torx T4 screwdriver.

Step 5

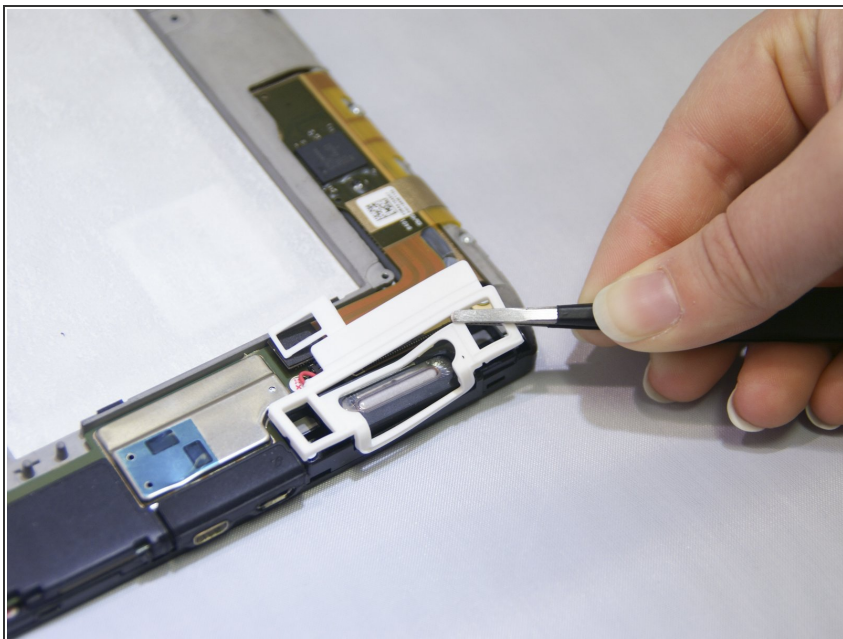


- Use tweezers to pull up the white rubber cover.

Step 6

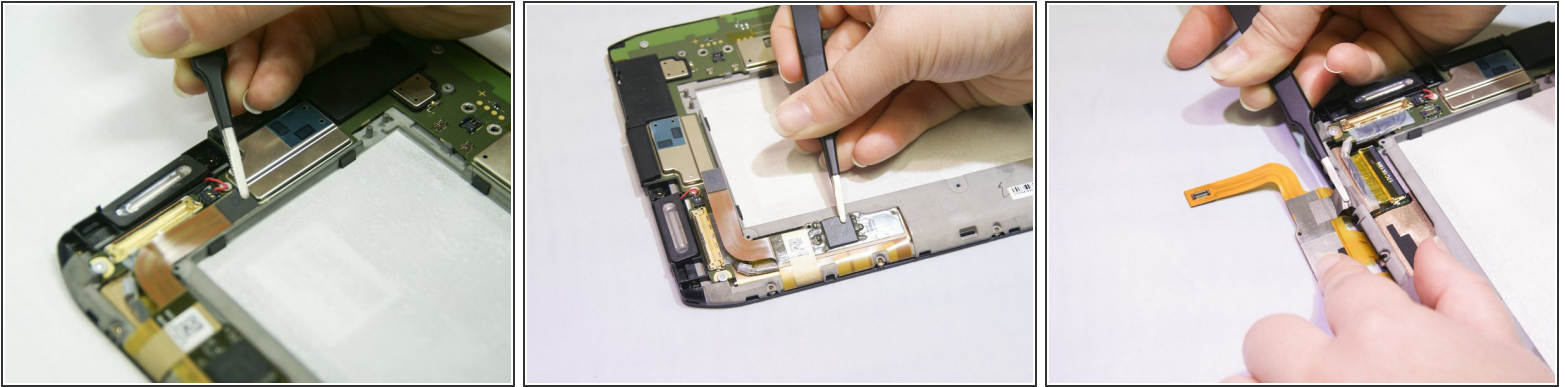


- Use the tweezers to pull up the small chip from its receiver.
- Use the tweezers to pull up the larger chip from its receiver.
- ⓘ There is adhesive attached to the back of the larger chip on the touchscreen controller strip.
- Use the tweezers to pull up one end of the small piece of tape that is holding the touchscreen controller.

Step 7

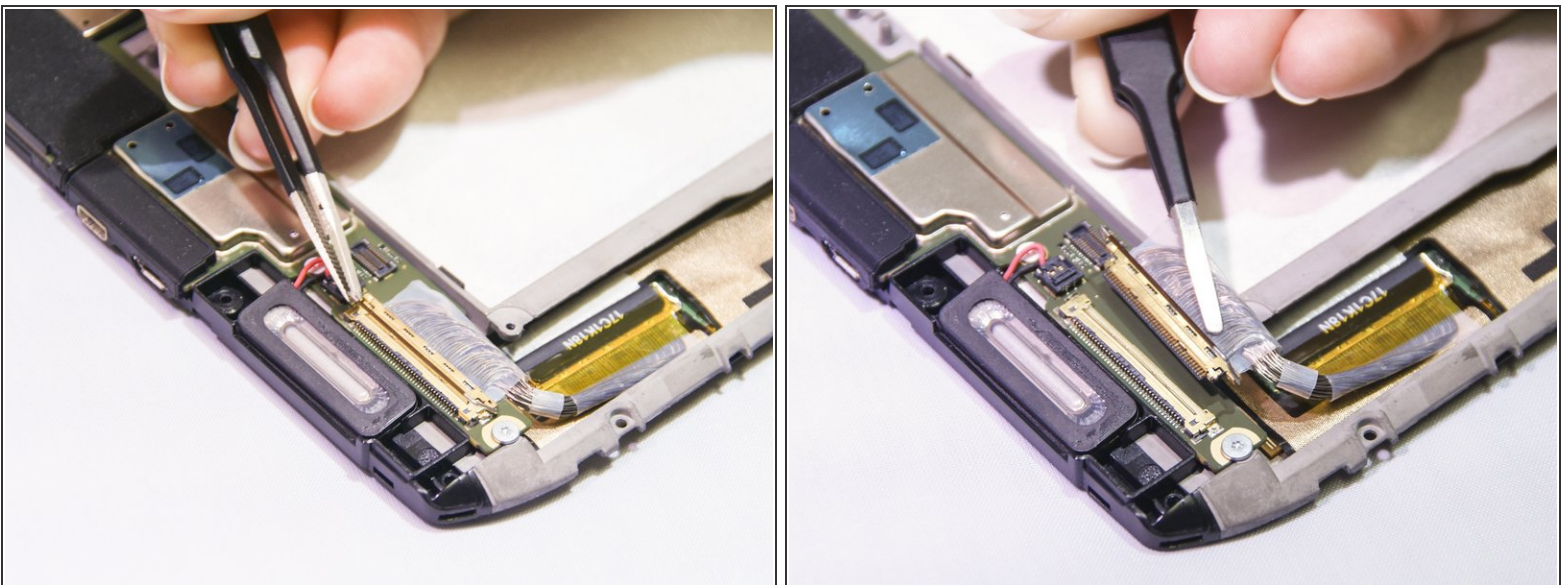

- Use the tweezers to pull up and release the thin handle that is attached to the LCD connector.
- Use the tweezers to pull out the LCD connector from its receptor.

Step 8

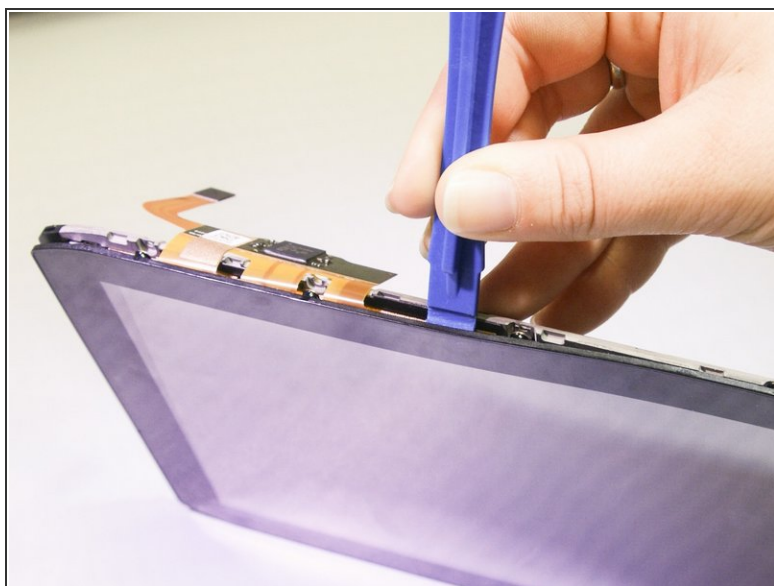

- Use a plastic opening tool to gradually separate the screen from the device.

To reassemble your device, follow these instructions in reverse order.