



Samsung Galaxy Tab 3 10.1 LED Light Replacement

Written By: Corey Brown



TOOLS:

[iFixit Opening Picks \(Set of 6\)](#) (1)

Step 1 — Rear Case



- Insert an opening pick between the rear case and the plastic rim.
- ① You may need to add multiple picks to detach the clips.
- Slide the pick along the edge of the rear case until you release the plastic clips attaching the rear case to the display.
- Continue to slide the pick around the edge of the rear case until all clips are released.

Step 2



- Lift the case up to remove it.

Step 3 — LED Light



- Insert an opening pick between the plastic frame and the screen.
- Slide the opening pick around the perimeter of the screen.
 - ① You will hear clicking noises as each plastic clip is released from the display chassis.




Step 4



- Lift the plastic frame to remove.

⚠ Avoid the three delicate ribbon cables.

Step 5

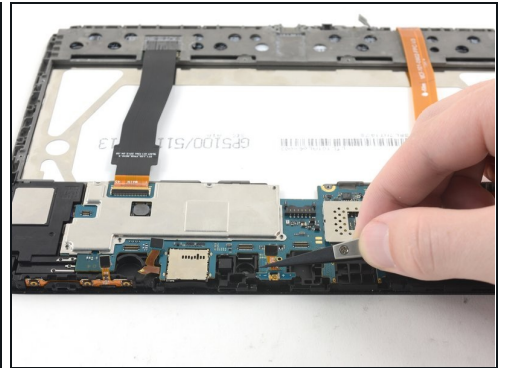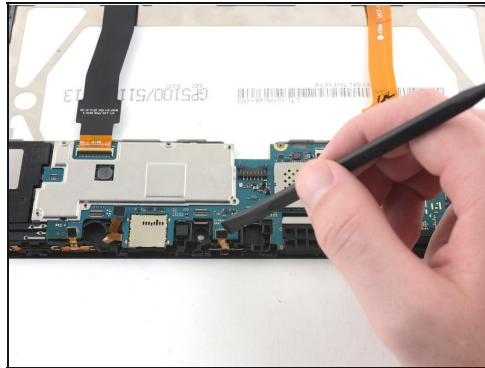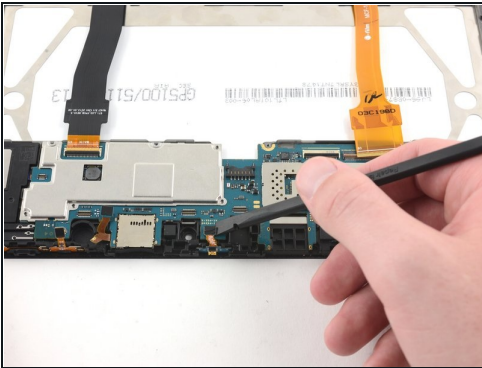

- Use the flat end of the spudger to flip up the press-fit connector attaching the LED to the motherboard.
- Remove the LED indicator light by gently pulling upward with nylon-tipped [tweezers](#).

To reassemble your device, follow these instructions in reverse order.