




Drobo FS DRDS2-A O-Ring Replacement

Replacing the O-Ring that helps make a seal with the front panel.

Written By: Nicholas Serres

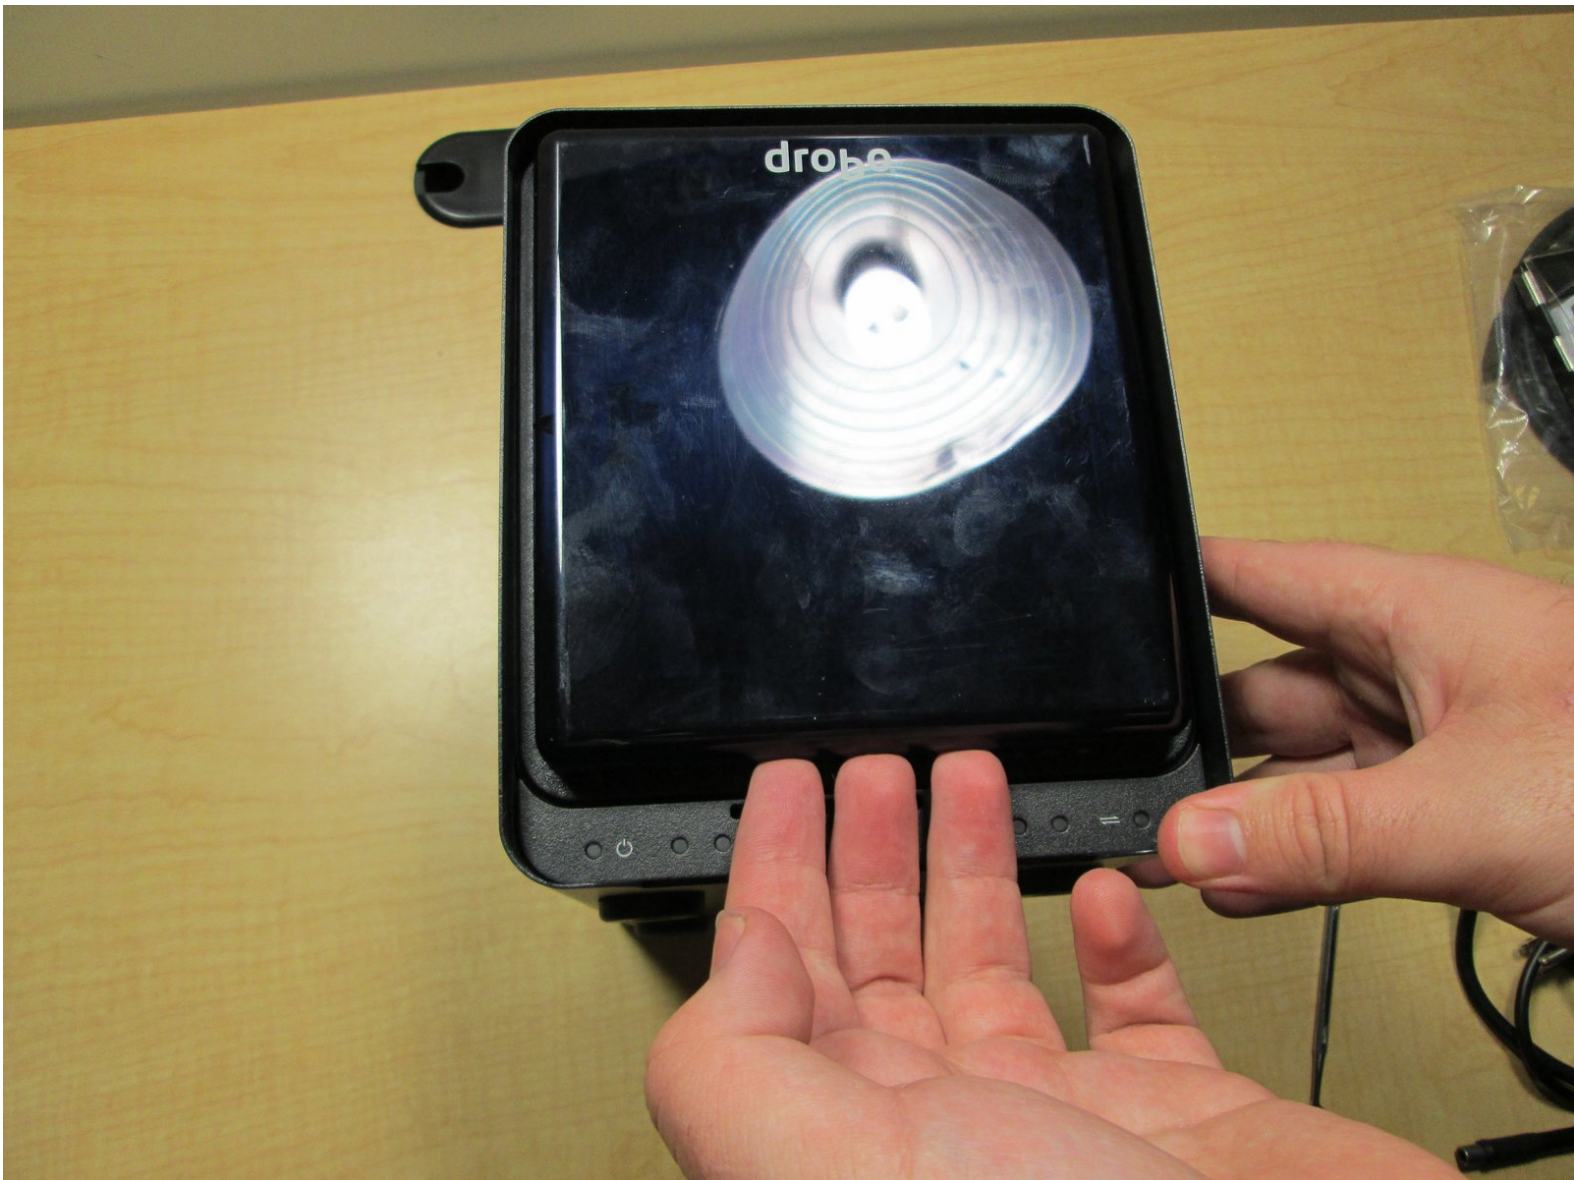

INTRODUCTION

This guide demonstrates how to remove and replace the o-ring, which seals around the drive mounting area.



TOOLS:


- [Metal Spudger](#) (1)
-

Step 1 — O-Ring



- Place fingers under front panel and pull up and away to remove it.

Step 2

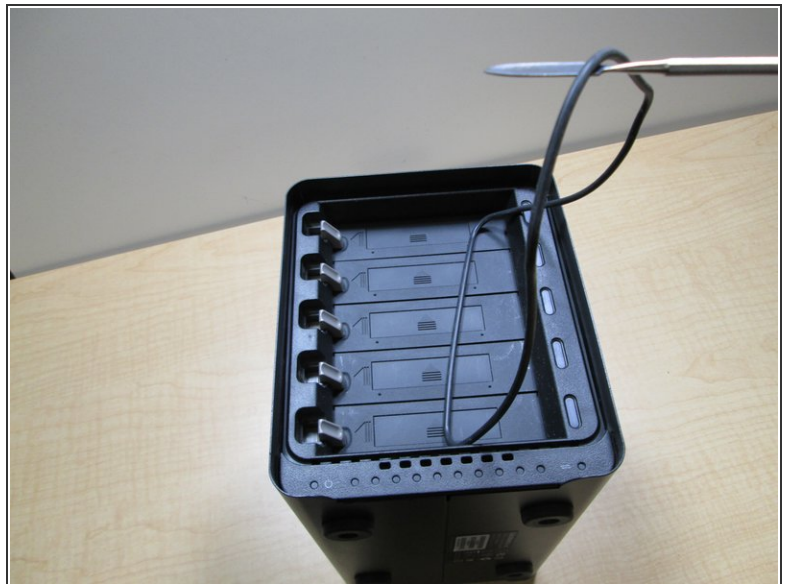

- Using a spudger, gently pry off the O-ring.

To reassemble your device, follow these instructions in reverse order.