



# Nexus One Vibrator Replacement

This guide is for installing the vibrator in the Nexus One.

Written By: Niklas Johnson







## TOOLS:


- [iFixit Opening Tools](#) (1)
-

## Step 1 — Lower Cover

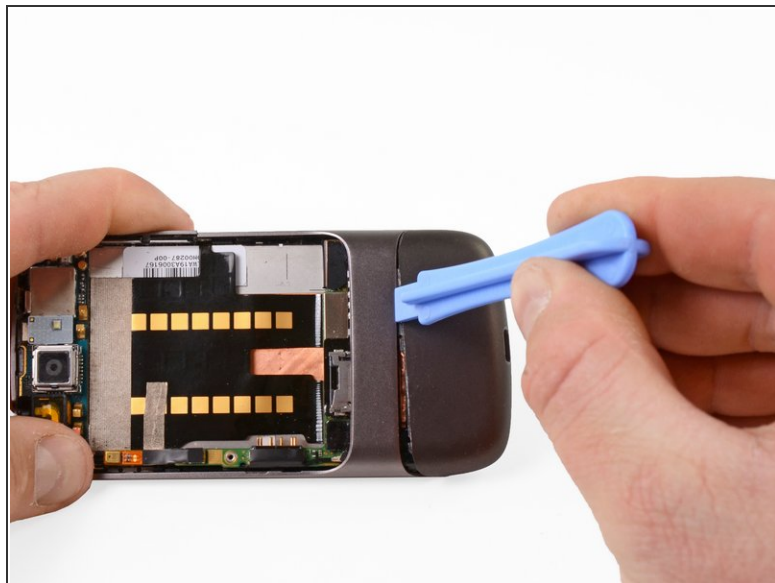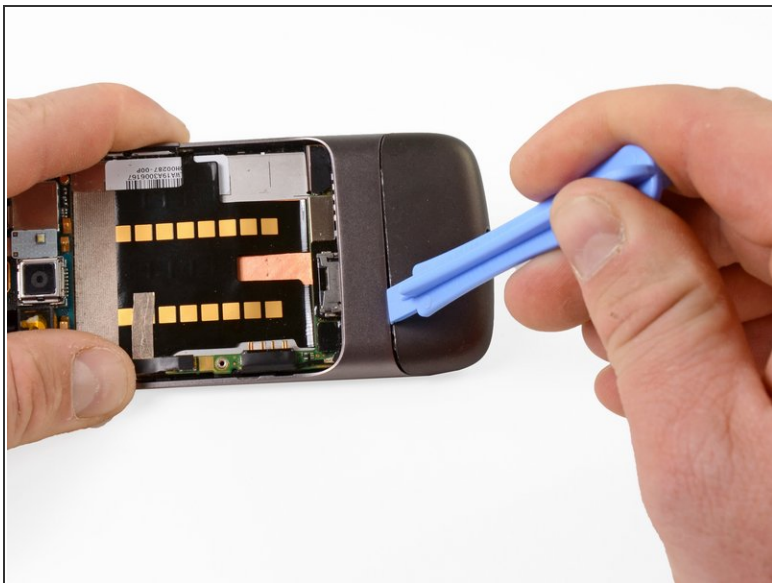

- Using the plastic opening tool, push the blade into the space between the case and lower cover.
- Turn the opening tool slightly, the lower cover will detach on that side.
- Repeat on other side of the seam.
- The lower cover will slide off.

## Step 2 — Antenna Housing

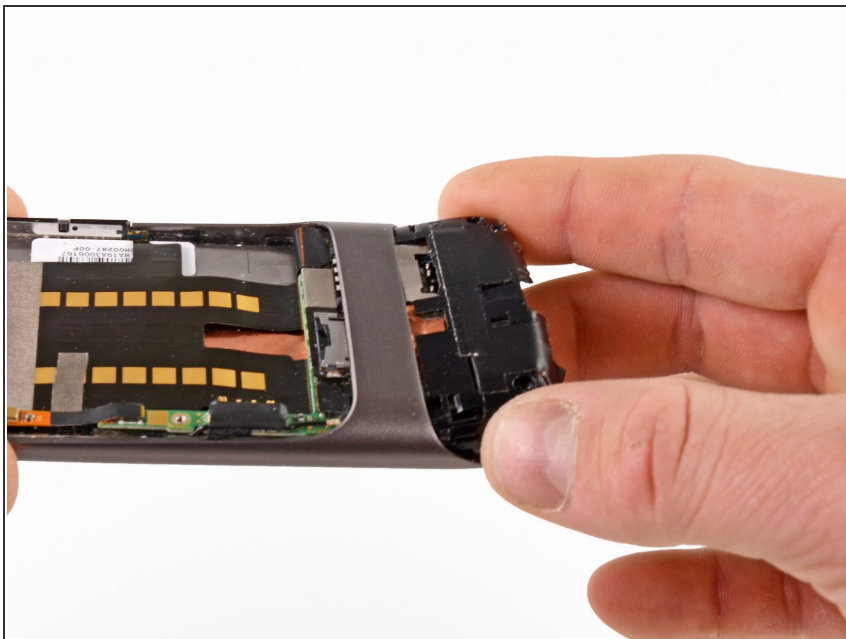

- Remove the one T5 Torx screw
- Remove the one #00 Philips screw
- Lift up the end of the antenna housing and slide it outwards.

## Step 3 — Vibrator



- The vibrator is located on the back of the antenna housing.
- Use the spudger to pry up on the axle of the motor.

To reassemble your device, follow these instructions in reverse order.