



MacBook Air Models A1237 and A1304 Lower Case Replacement

Written By: Walter Galan



INTRODUCTION

Replacing your lower case is easy! It only takes 10 screws.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [MacBook Air \(Original\) Lower Case](#) (1)
- [MacBook Air \(Late 2008 Mid 2009\) Lower Case](#) (1)

Step 1 — Lower Case

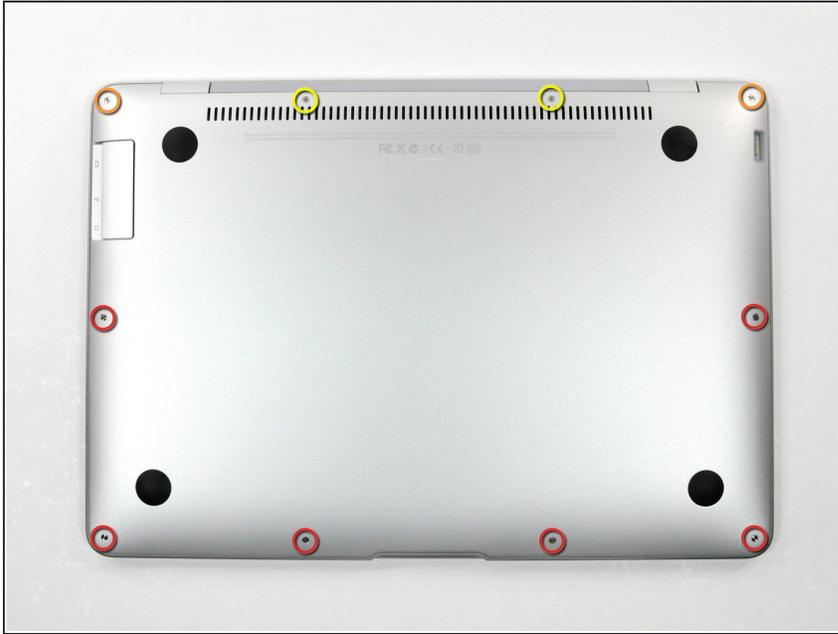

 Unplug your MacBook Air and power it off before you proceed.

- Remove ten Phillips screws securing the lower case to the MacBook Air:
 - Six 2.8 mm screws
 - Two 3.8 mm screws
 - Two 5.4 mm screws

Step 2



- Slightly lift the lower case near the vents and push it toward the rear of the computer to free the mounting tabs.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-27 11:11:04 PM (MST).

