




PowerBook G4 Titanium DVI Keyboard Replacement

Written By: iRobot

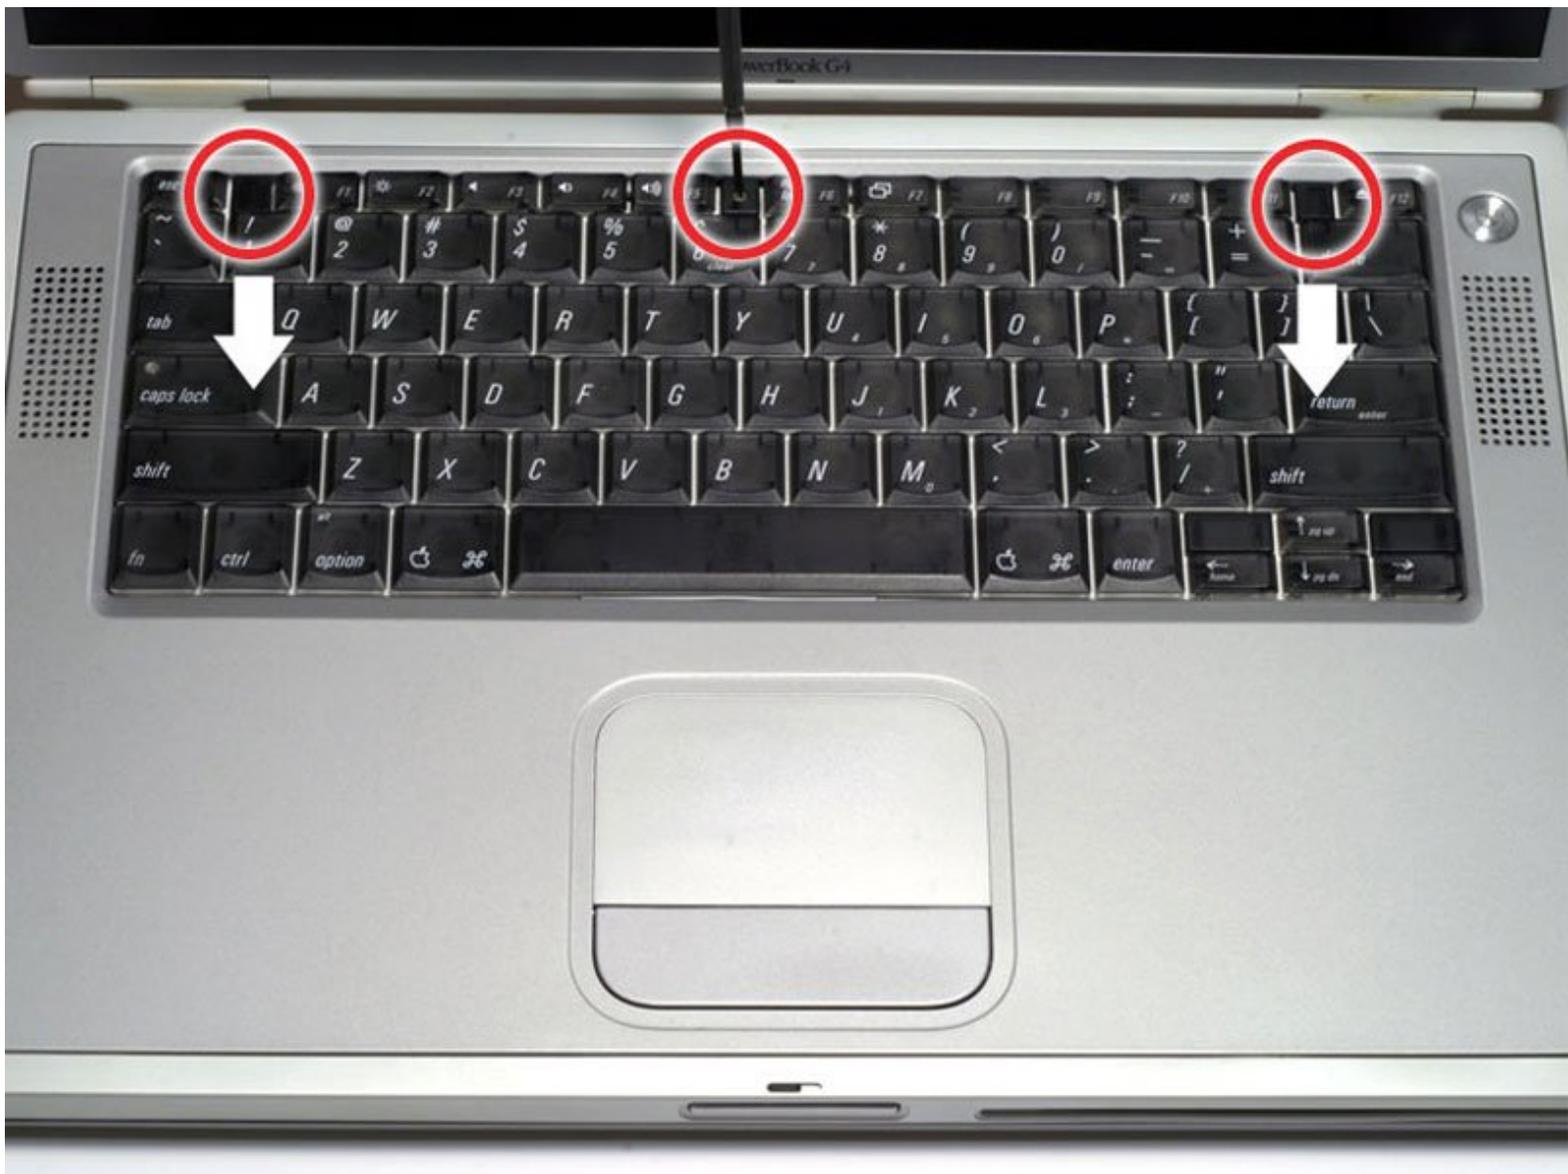

INTRODUCTION

Replacing this keyboard is easy and takes only a few minutes.



PARTS:


- [G4 Titanium DVI Keyboard](#) (1)
-

Step 1 — Battery



- Locate the battery release tab on the underside of the G4.
- Slide the battery release tab to the left and lift the battery out of the computer.

Step 2 — Keyboard

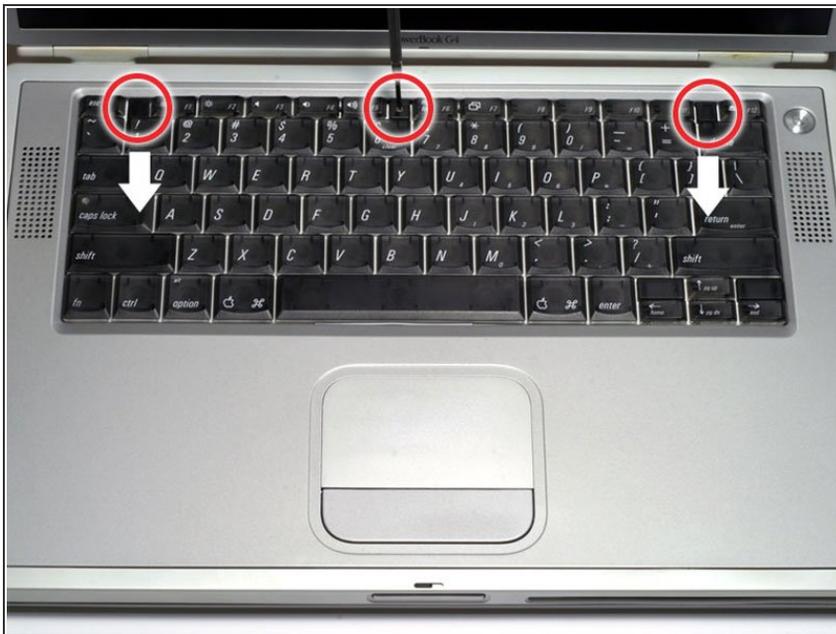

- Turn the keyboard locking screw located in the middle of the keyboard so that it is parallel to the space bar. A half turn from parallel to parallel will unlock it. Another half turn will lock it again.
- Pull the keyboard release tabs toward you and lift up on the keyboard until it pops free.

Step 3



- Rest the keyboard face down on the trackpad area.
- Disconnect the keyboard connector from the logic board.

Step 4



- Your laptop should look approximately like this.

To reassemble your device, follow these instructions in reverse order.