




Huawei P8 Lite Camera Replacement

This guide will help you replace the camera in your Huawei P8 Lite phone.

Written By: John Poffenberger

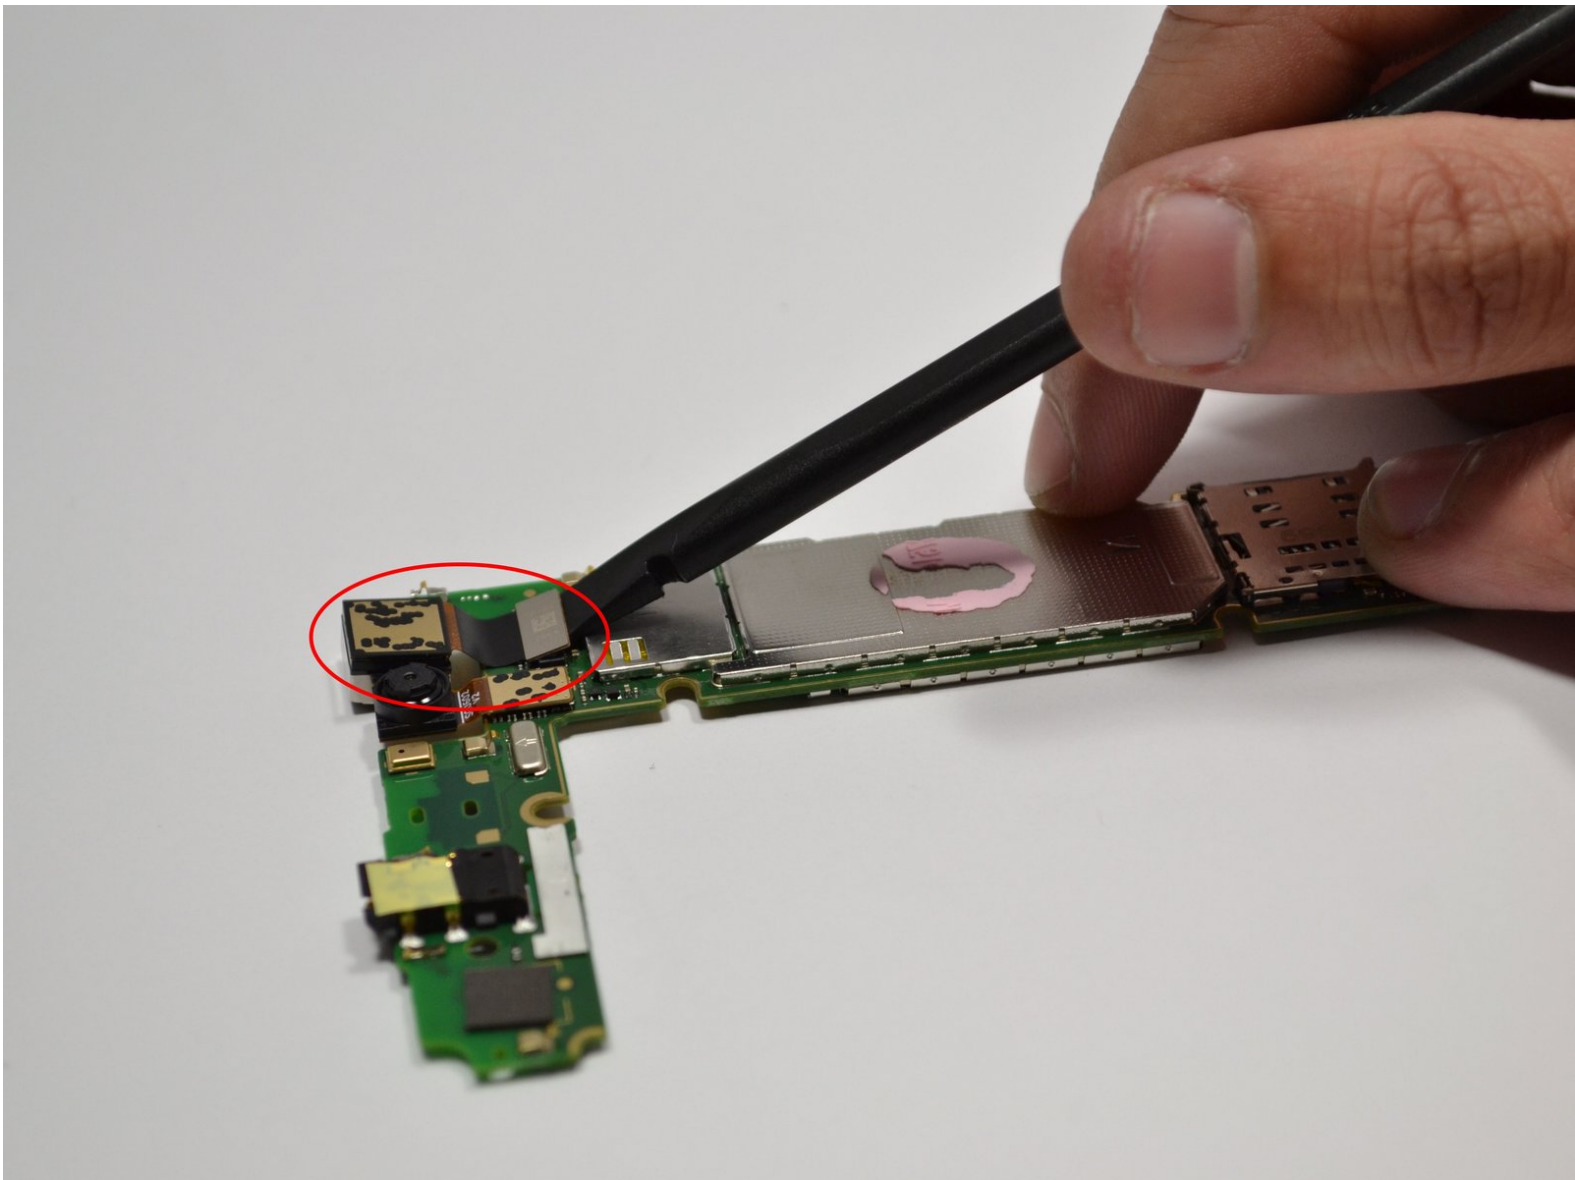

INTRODUCTION


This guide will show you how to remove the Front and Rear Cameras for the Huawei P8 Lite.



TOOLS:

- [Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Camera

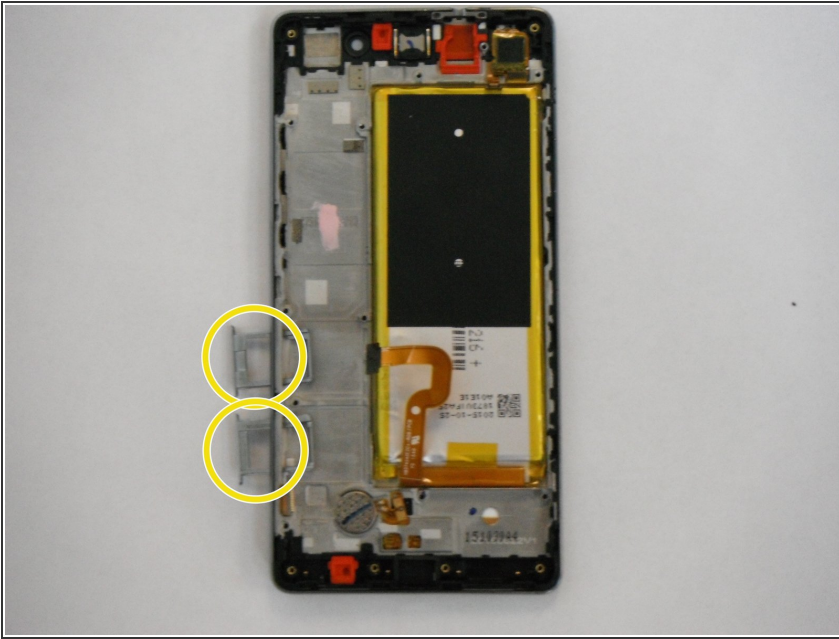


- Using the [Spudger](#), begin by removing both of the SIM slots from the side of the device.

Step 2





- Then remove the back cover of the device with the [Spudger](#). To prevent damage to the back cover, begin removing the cover half an inch to the right of the headphone jack and continue prying around the perimeter of the device.

Step 3

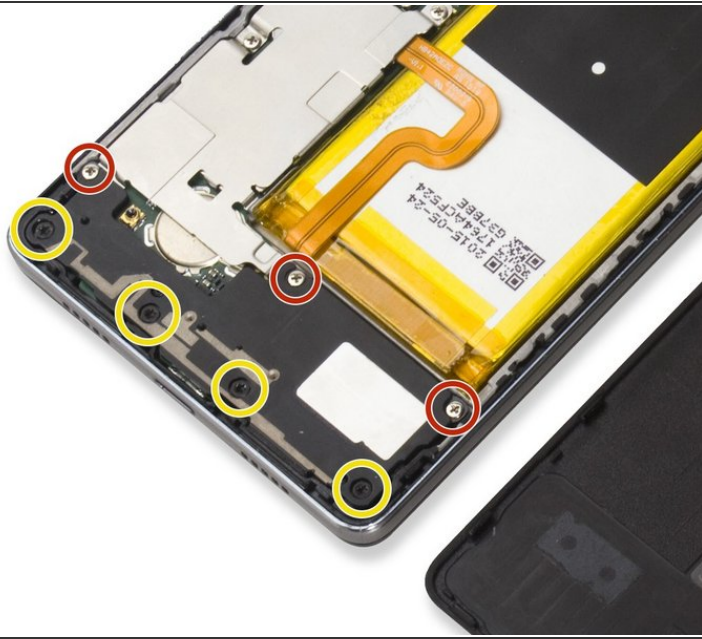


- Locate the Loudspeaker at the bottom of the device.
- Remove the four black screws using the [T5 Torx Screwdriver](#).
- Then use the [Phillips #000 Screwdriver](#) to remove the three silver screws.

Step 4

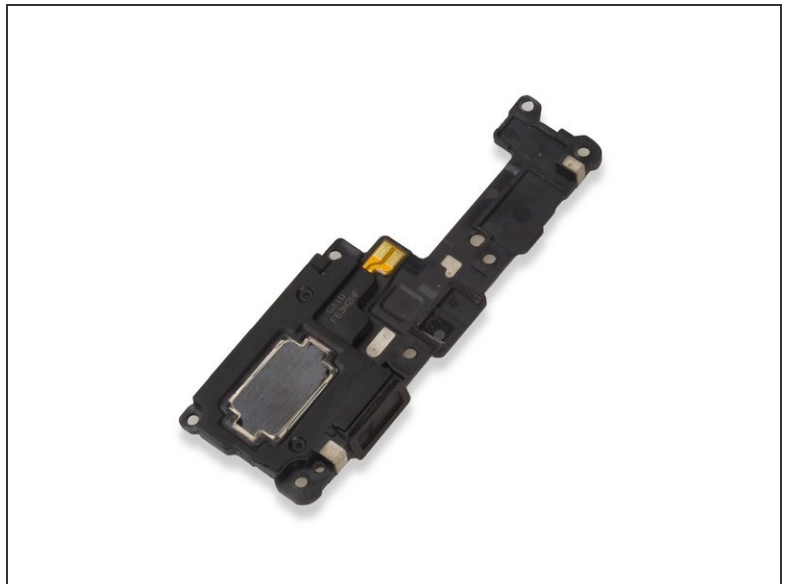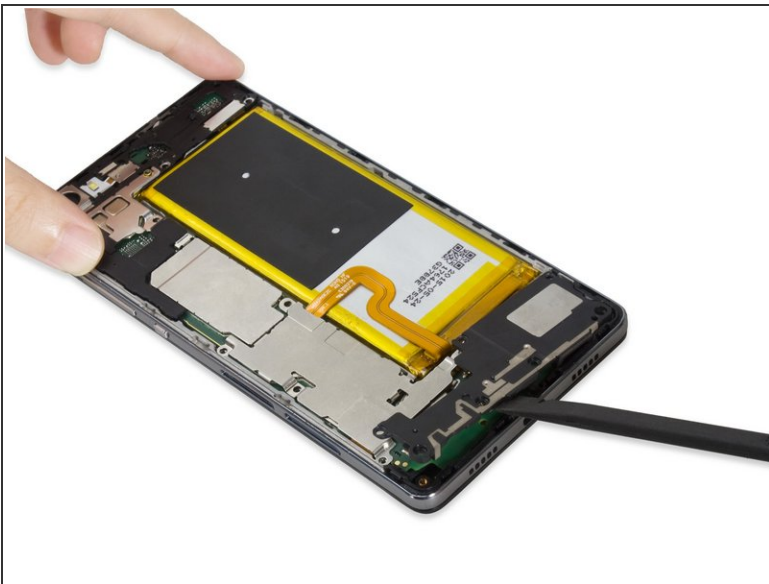


- Use the [Spudger](#) to gently remove the Loudspeaker from the device. Place the replacement Loudspeaker into the device and follow these steps in reverse order to reassemble the device.

Step 5

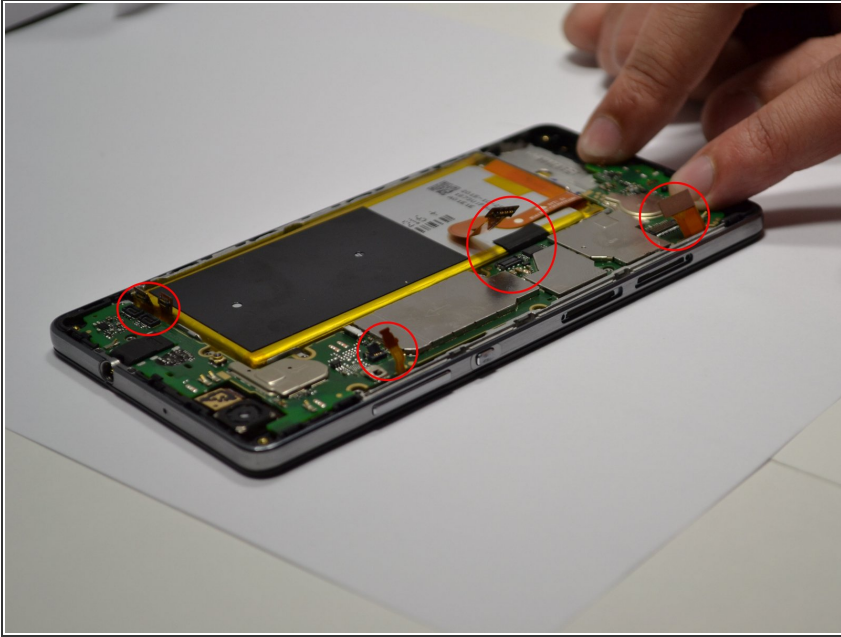


- Gently separate the connectors attached to the motherboard.

Step 6

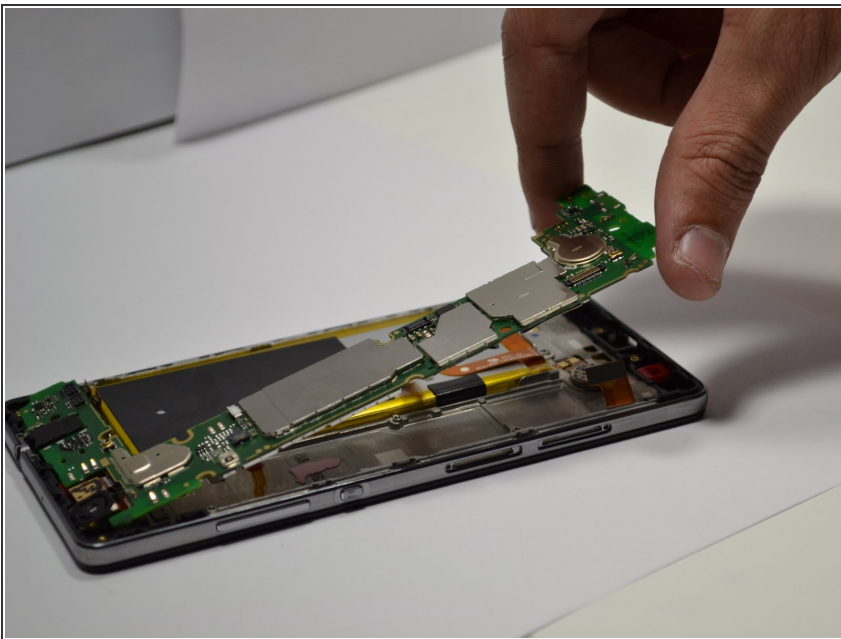



- Carefully remove the motherboard from the device.

Step 7

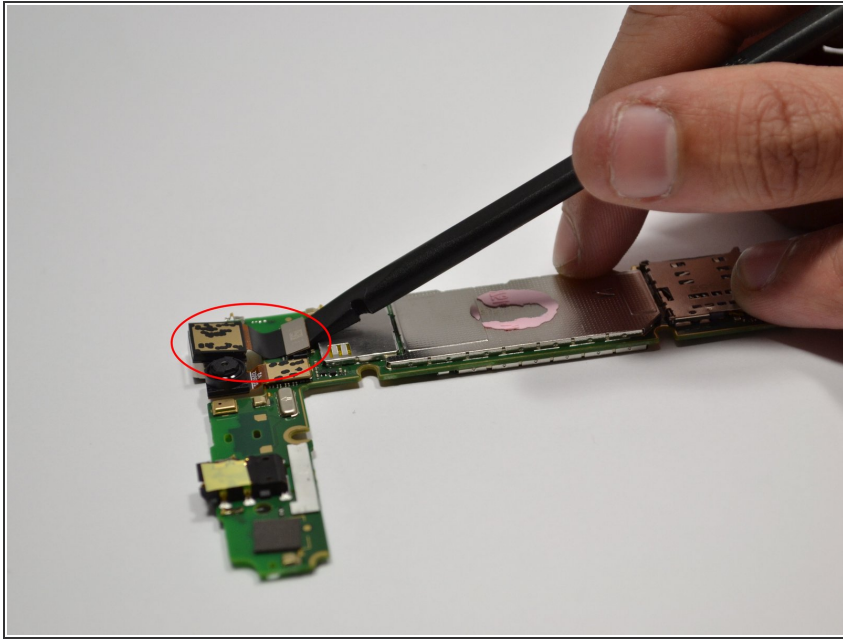

- Once the motherboard is removed use the [Spudger](#) to remove the Front Camera.

Step 8

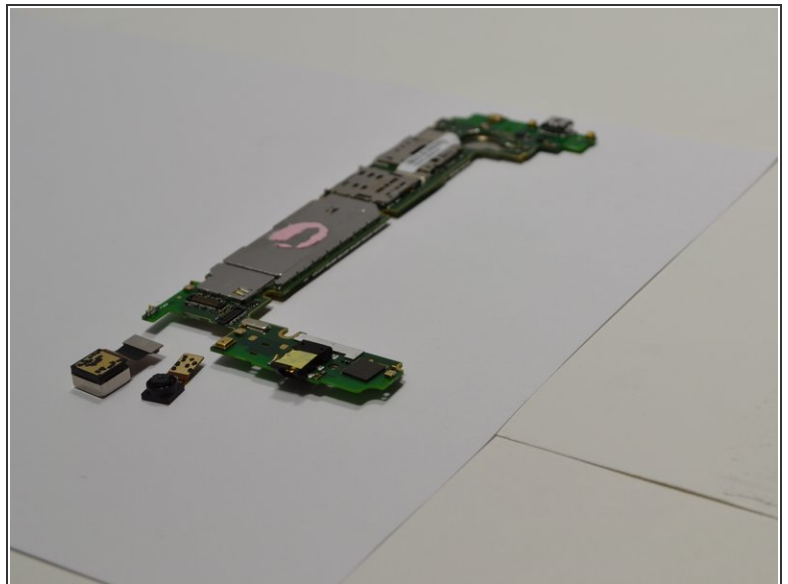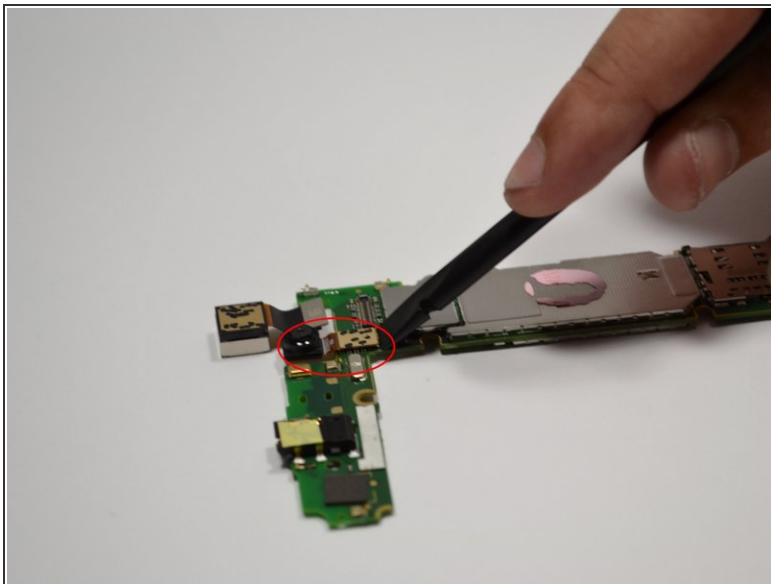

- Similarly, use the [Spudger](#) to remove the Rear Camera.

To reassemble your device, follow these instructions in reverse order.