




# Unbranded UB-15MS10 Battery Replacement

Replacing your dying or dead battery to bring power back to your Unbranded UB-15MS10 tablet.

Written By: Evan Peterson

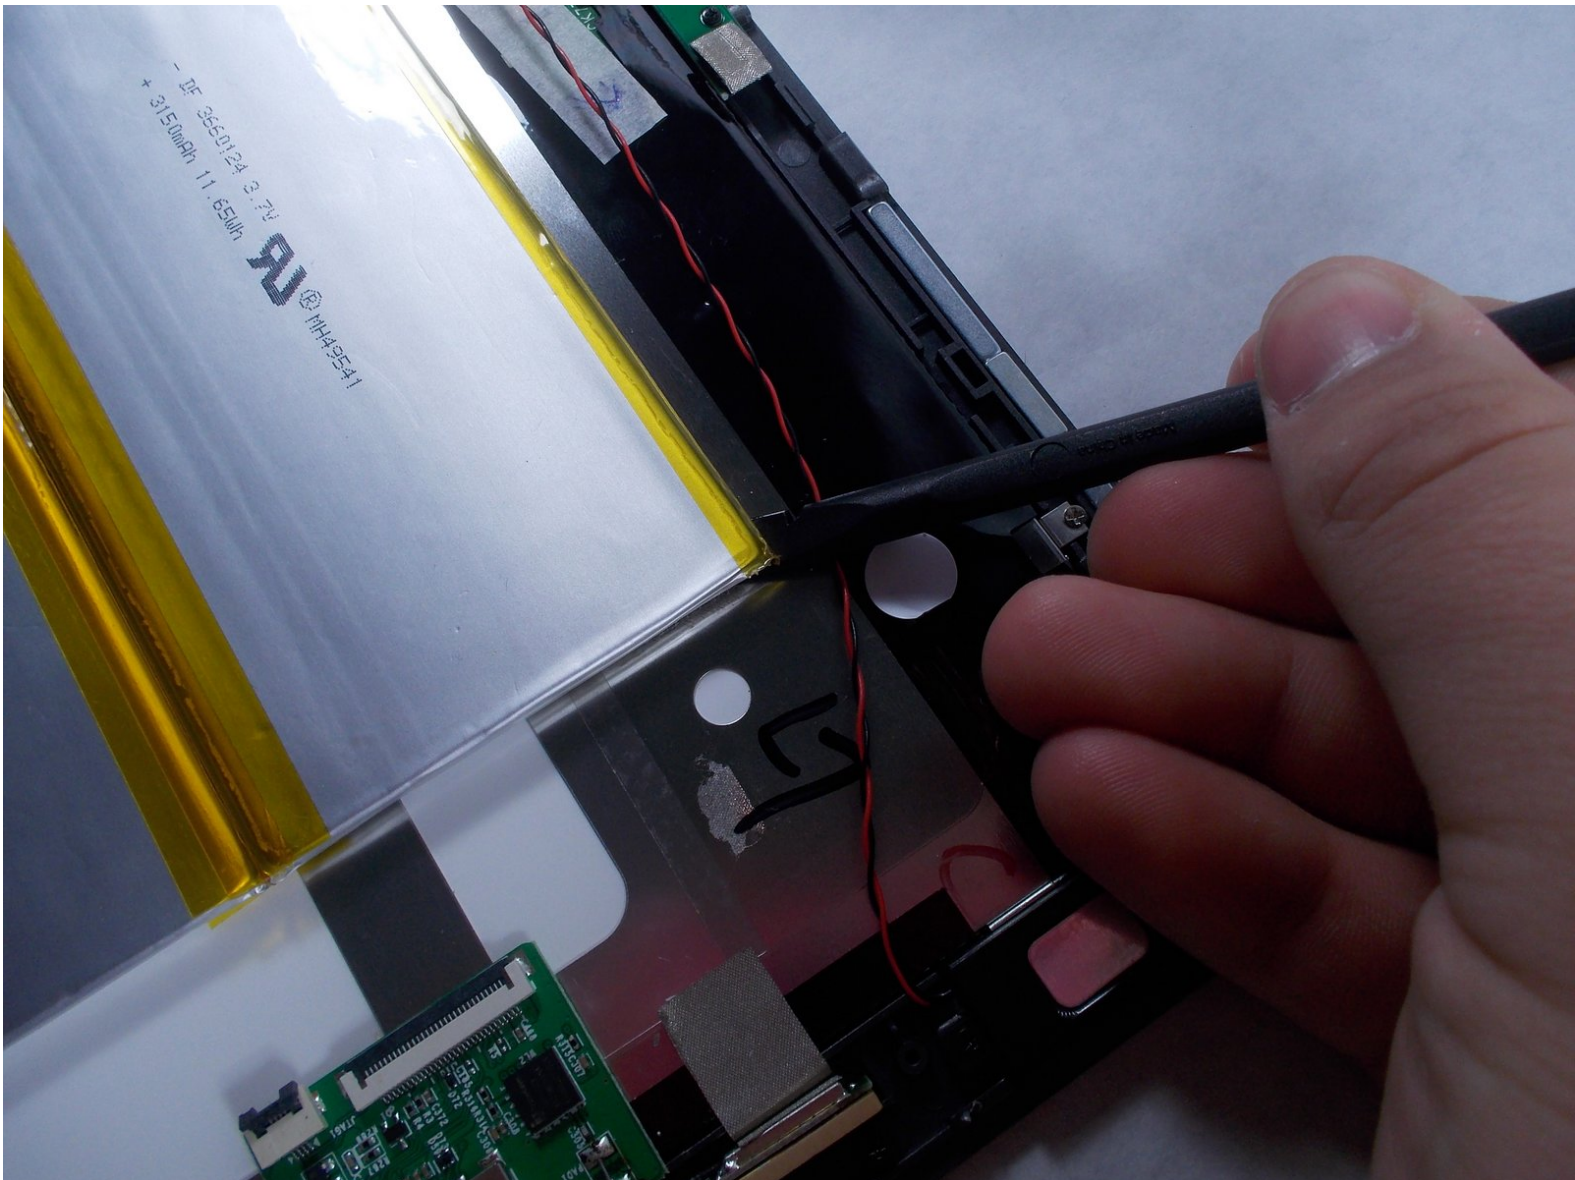

## INTRODUCTION


Because the battery is glued in place, removing the battery from the Unbranded UB-15MS10 must be done carefully as to not damage the device. Do not damage the battery during replacement as sufficient damage will cause the battery to leak hazardous material onto you, as well the device.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Portable Soldering Iron](#) (1)
-

## Step 1 — Battery

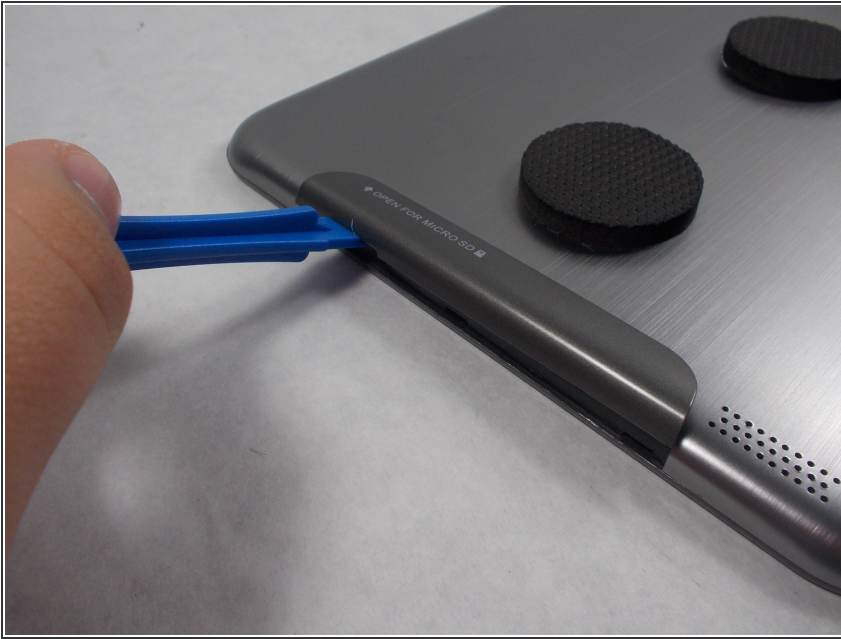

- Use an opening tool to pry off the lid of the memory card compartment.

## Step 2



- Remove the two 1.2 mm screws within the compartment using a Phillips #00 screwdriver.



## Step 3




- Insert opening tools to partially pry open the cover.

## Step 4



- With the cover being partially held open, slide a spudger around the seam to pry off the cover.

## Step 5

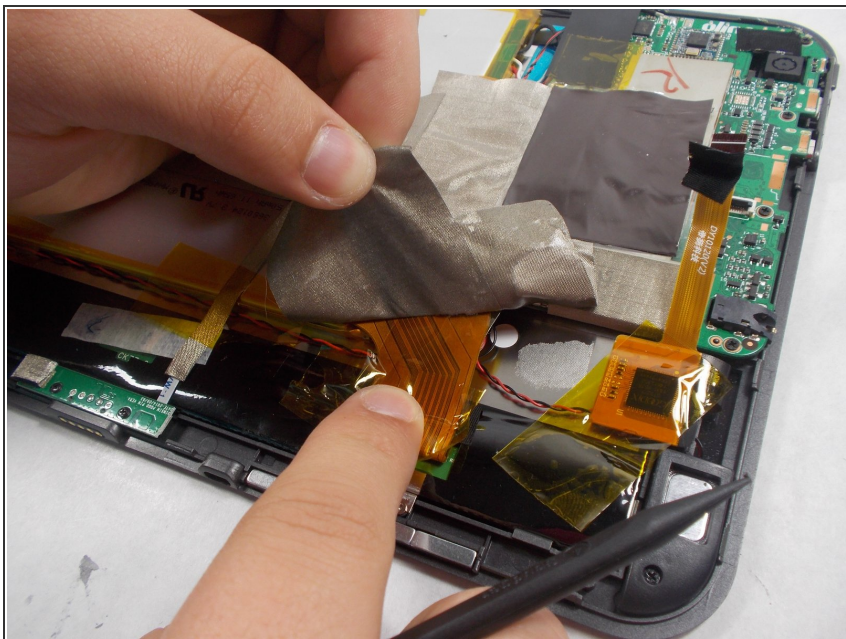

- Remove the tape that is holding the battery in place.


## Step 6



- Cut the wires connecting the battery to the device using a pair of wire cutters.




## Step 7

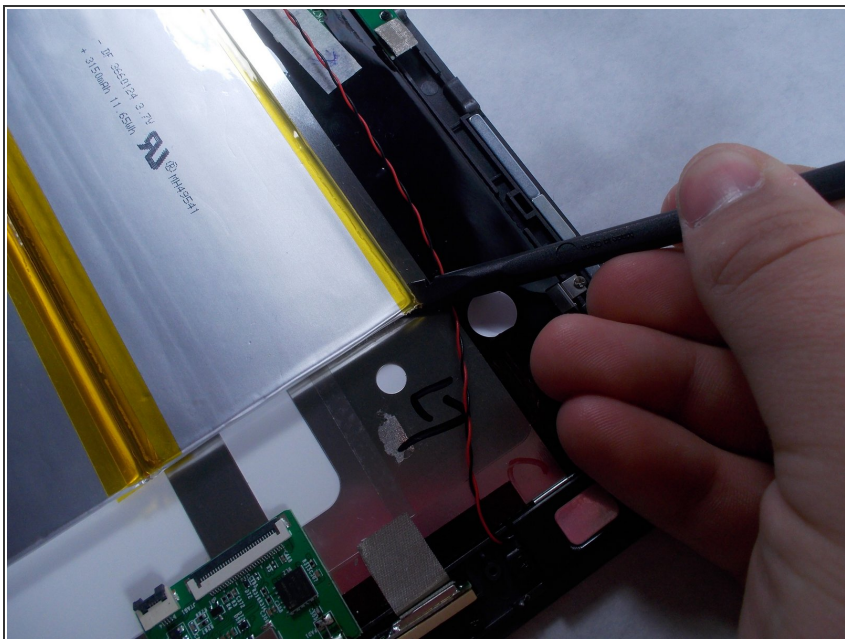

- Carefully remove the battery, making sure that all wires are disconnected.

## Step 8

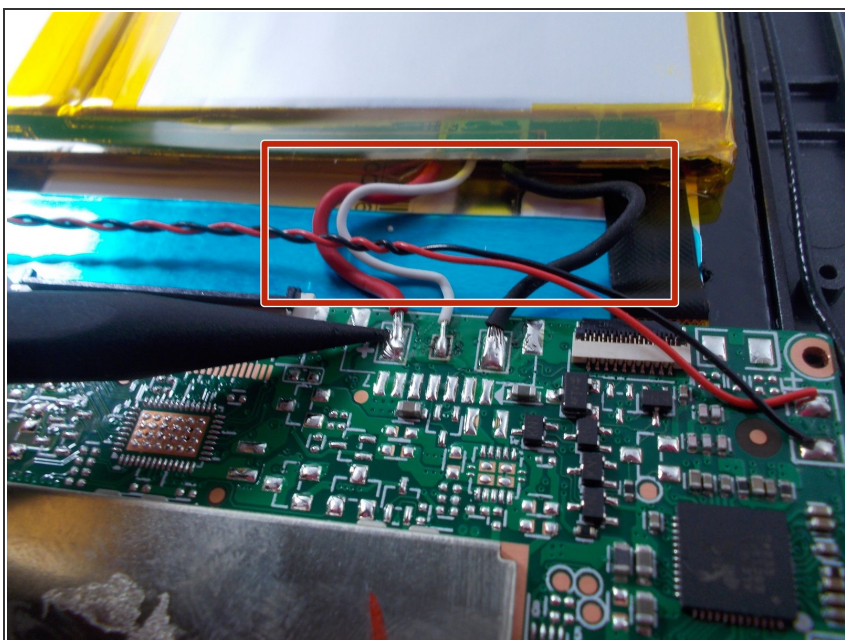

- Splice the new battery with the red, white, and black wires connected to the motherboard.

To reassemble your device, follow directions 1-7 in reverse order.