



# Dell Inspiron 910 Touchpad Buttons Replacement

This guide will teach you how to remove the...

Written By: Kyle Beekman



# INTRODUCTION

This guide will teach you how to remove the buttons below the track pad from the laptop device.

---

## TOOLS:

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

---

## Step 1 — Battery



- Flip the laptop so the battery is facing upwards.
- Push the battery release tabs toward the center of the device.
- Remove the battery.

## Step 2 — Keyboard



- Remove the two countersunk keyboard screws using the Phillips #00 screwdriver.


## Step 3



- Lift up the keyboard using your fingers or a plastic opening tool.
- ⚠ Potential for device damage: Do not tear the ribbon cable hidden behind the keyboard.
- Disconnect the cable by sliding the connector ears outward.




## Step 4 — Touchpad Buttons

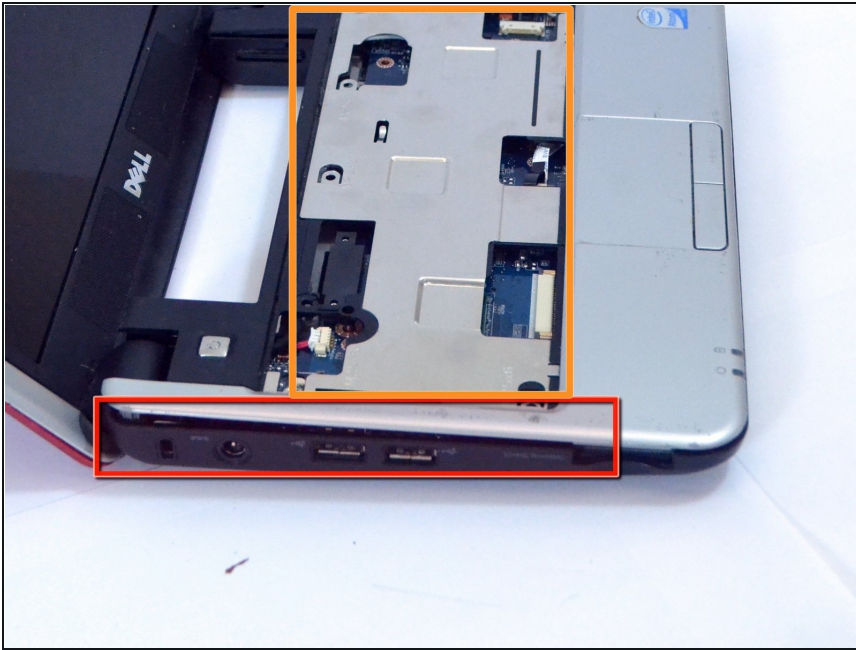


- Remove the seven Phillips #00 screws that hold the metal component to the frame
- Detach the two ribbon cables on either side of the silver panel
- ⚠ Be careful to not tear the ribbon cables hidden behind the panel
- Gently lift the silver panel from the laptop using the plastic opening tool
- Set the laptop aside
- ① depending on your model, there could still be some hidden screws on the bottom of the case of the mini that hold the palm-rest in place

## Step 5

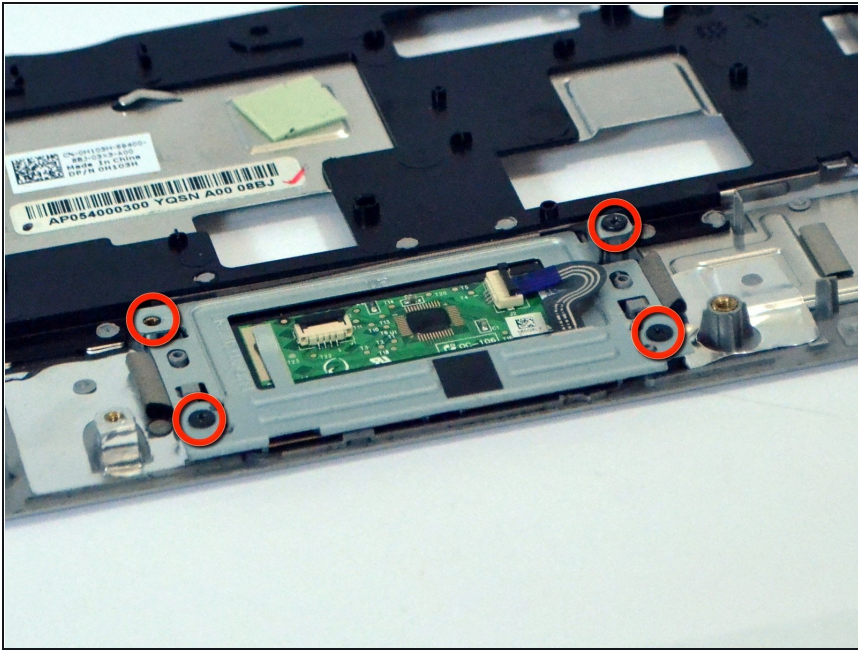

- Flip the silver panel over
- Remove the four screws that connect the buttons to the panel using the Phillips #00 Screwdriver

## Step 6

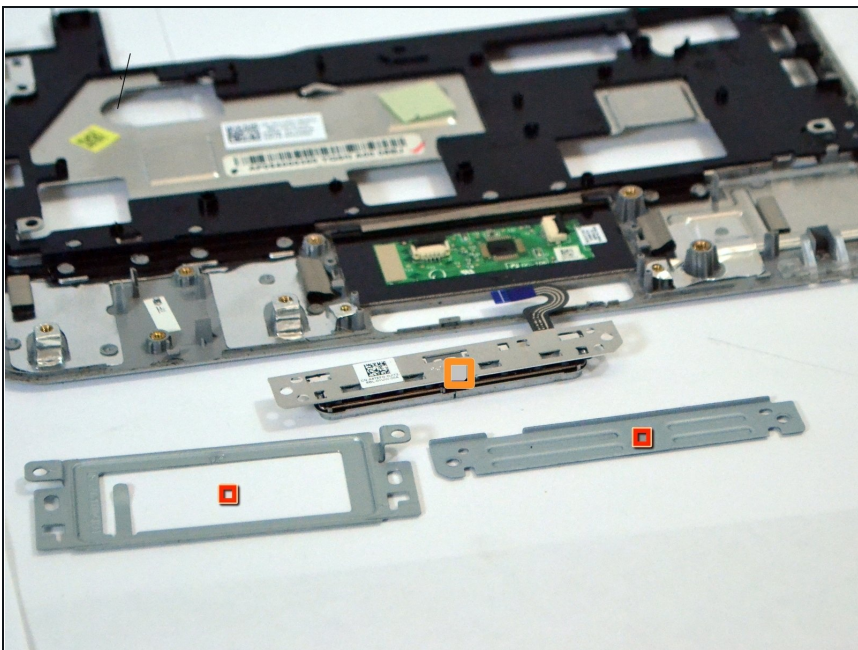

- Remove the covers from the panel
- Remove the buttons from the panel
- Release the mouse button by flipping the center connector tab up

To reassemble your device, follow these instructions in reverse order.

