


Muffled Microphone

Follow this guide when applying adhesive strips to a iMac Intel 21.5" Retina 4K Display (2017) to prevent covering the microphone.

Written By: Oros

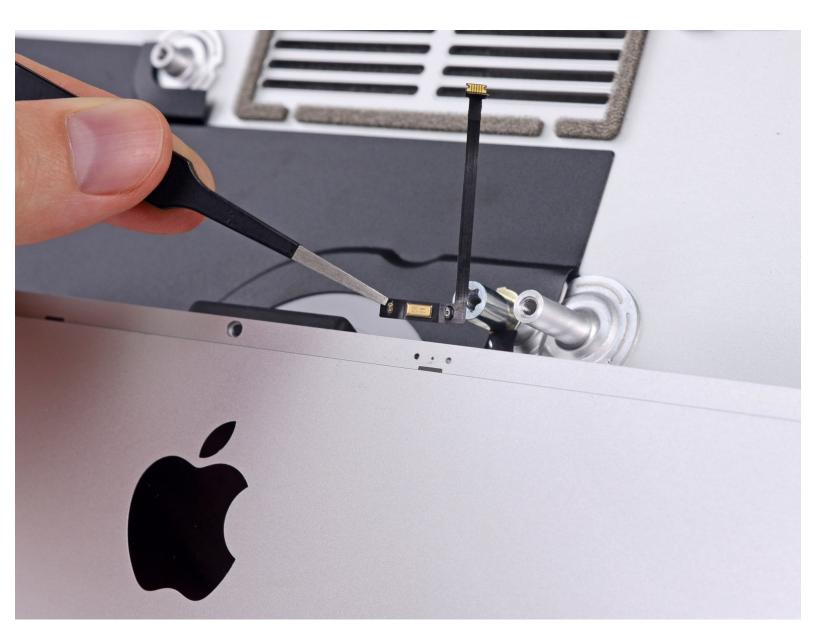

INTRODUCTION


Please refer to the <u>iMac Intel 21.5" Retina 4K Display (2017) Adhesive Strips Replacement guide</u> for the official procedure, including steps to accommodate the microphone.

This guide has been archived for historical purposes.

TOOLS:

- Tweezers (1)
- Spudger (1)
- Utility Scissors (1)

Step 1 — Muffled Microphone

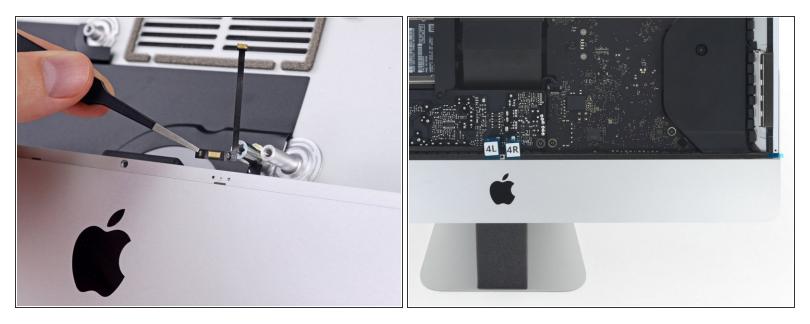

- (i) The frame of this iMac model is identical to its 2012-2015 predecessors, except that the microphone is behind the bottom-right edge of the display.
- (i) In this new position, the "4R" strip completely covers the microphone and the holes in front of it, deadening any sound picked up.

Step 2



- Use scissors to cut off the part of the adhesive strip that will cover the microphone.
- Continue with adhesive installation and reassembly <u>as instructed</u>.

To reassemble your device, follow these instructions in reverse order.