




# Nikon D70 DC/DC Board Replacement

Replace the DC/DC Board in your Nikon D70.

Written By: Andrew Bookholt

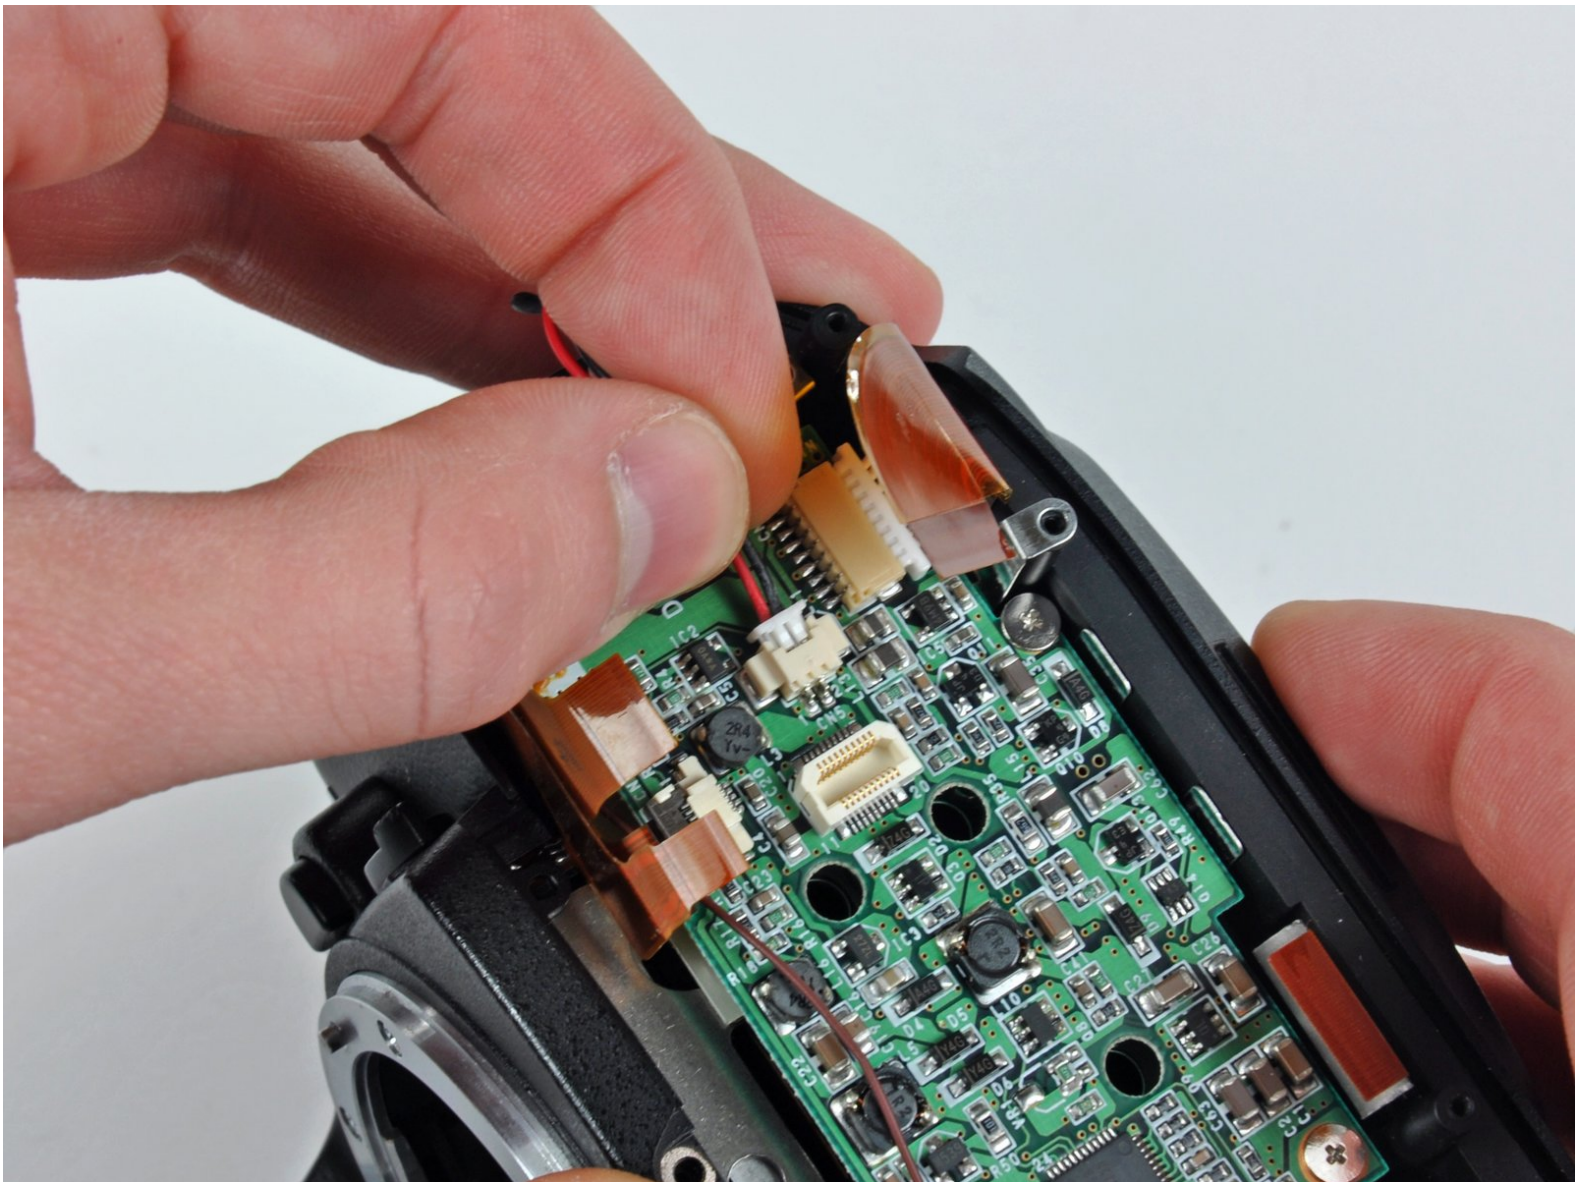

---

## INTRODUCTION

Replacing the DC/DC board requires a fine tipped soldering iron and knowledge of surface mount soldering.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Solder](#) (1)
  - [Soldering Iron](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery



- Use your finger tip to pull the battery release tab toward the center of the D70.
- Open the battery door and rotate it away from the bottom cover.

## Step 2



- Pull the battery out of the D70.
- ⓘ It may be necessary to wiggle the battery while pulling to free it from its pocket in the case.



### Step 3 — Bottom Cover




- Remove the following eight screws securing the bottom cover to the D70:
  - Six 5.8 mm Phillips screws
  - One 10.7 mm Phillips screws
  - One 8.2 mm Phillips screws

### Step 4



- Carefully pull the bottom cover to separate it from the body of the D70.
- Remove the bottom cover from the D70.

## Step 5 — Memory Compression Board

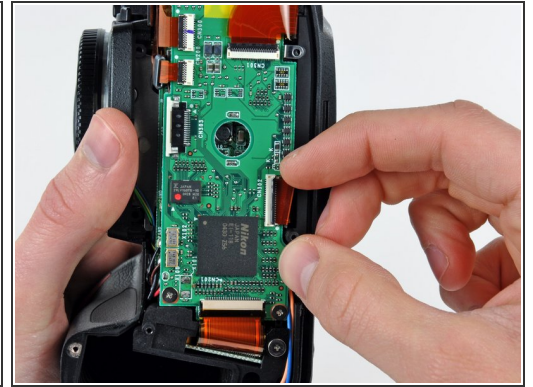

- Remove the four ZIF ribbon cables highlighted in red by using the following procedure:
  - Use your fingernail to flip up the ZIF cable retaining flap on each socket.
- ⚠ Be sure you are prying up the retaining flap, **not** the socket.
- Pull the ribbon cable straight out of its socket.


## Step 6



- Carefully peel back the piece of tape covering the Compact Flash ribbon cable socket.
- ⓘ It is not necessary to completely remove this piece of tape.




## Step 7

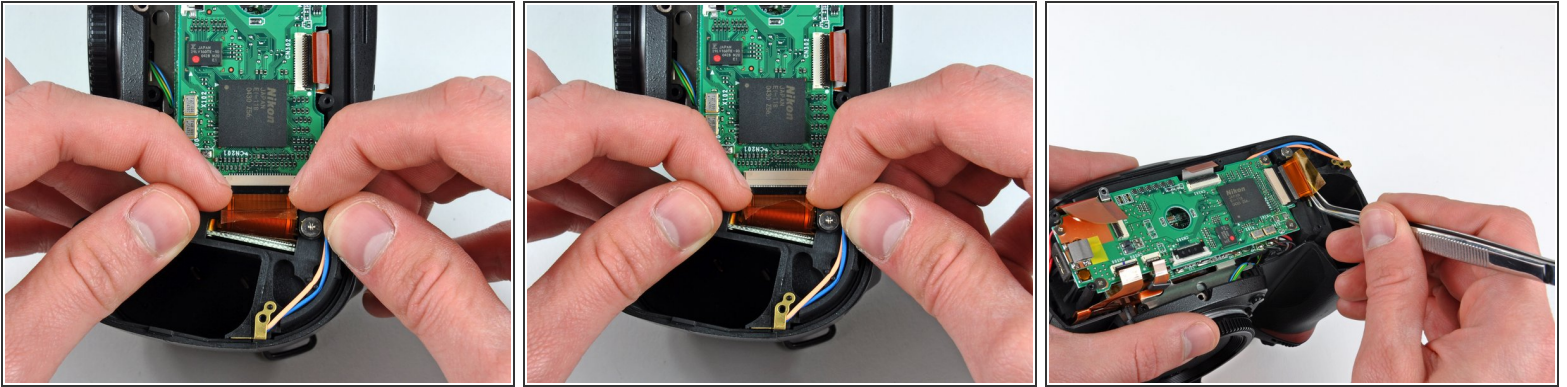

- Use your fingernails to carefully pull the ZIF cable lock away from its socket.
- ⚠ Do not try to completely remove the ZIF cable lock. It will move about 1 mm and stop.
- Use a pair of tweezers to pull the Compact Flash ribbon cable out of its socket.

## Step 8

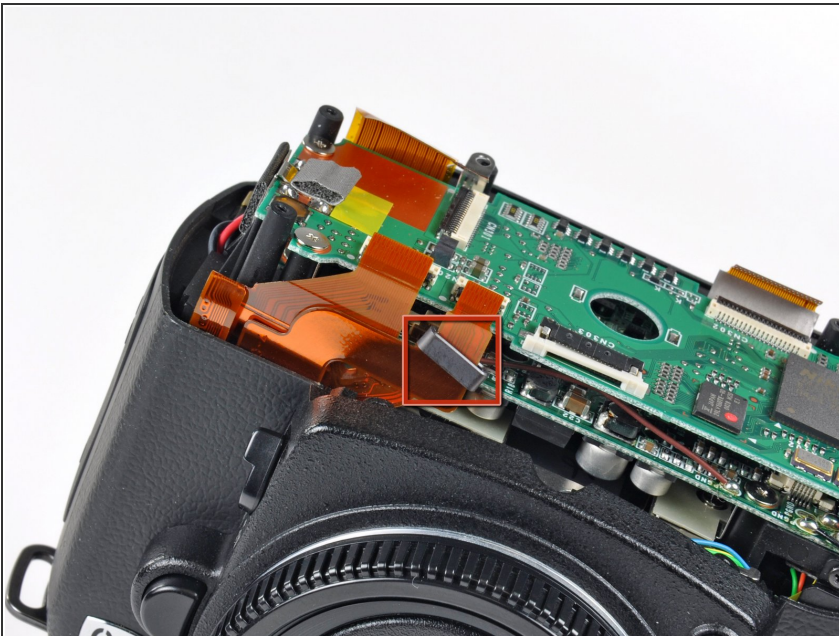


- ☑ Be sure not to lose the small iron core around the DC-In ribbon cable.

## Step 9



- Remove the four 4.3 mm Phillips screws securing the memory compression board to the D70.



## Step 10

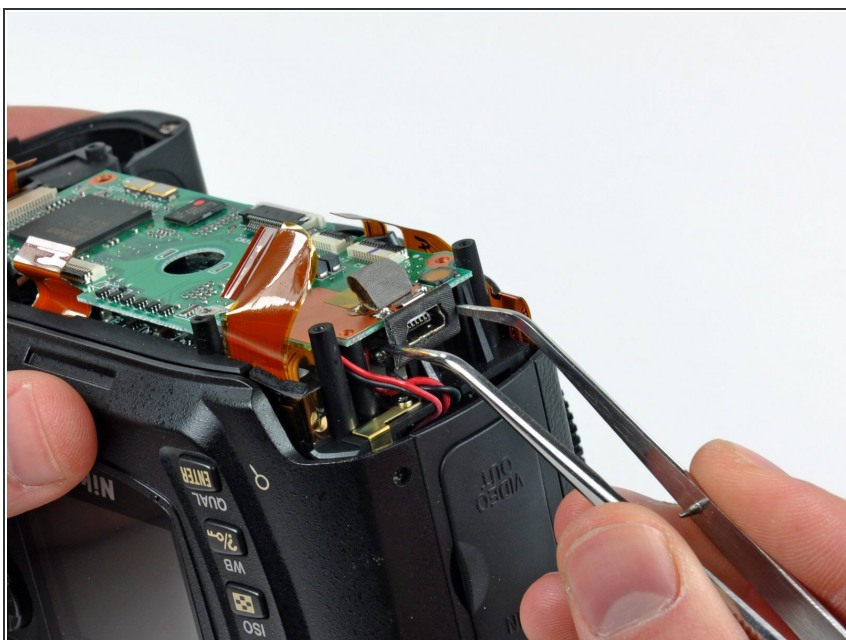

- Use a pair of tweezers to pull the USB connector bracket away from the edge of the memory compression board.




## Step 11

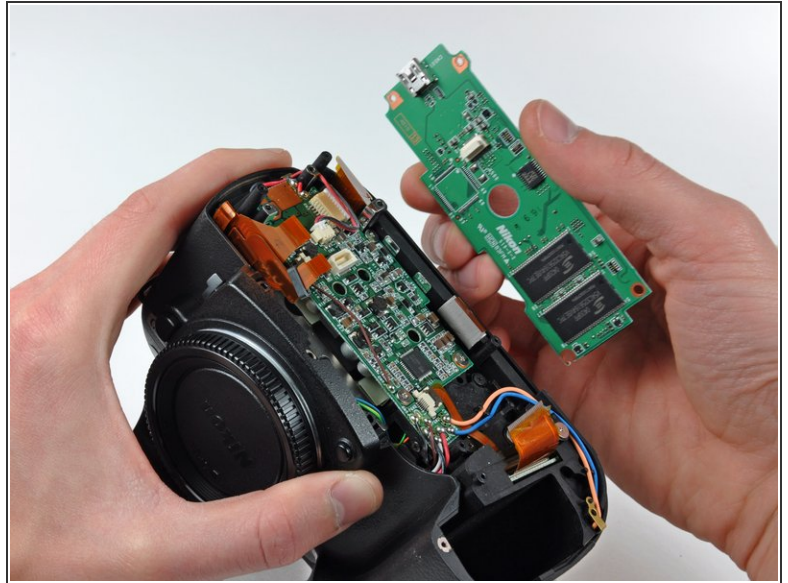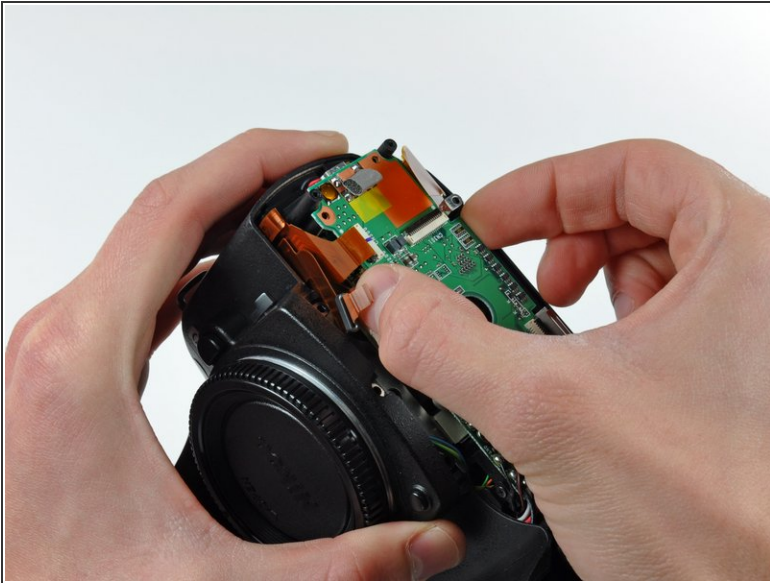

- Grab the memory compression board by its edges at the position shown in the first picture.
- Pull the memory compression board straight up off the DC/DC board to avoid damaging the connector on the underside of the memory compression board.



## Step 12 — DC/DC Board

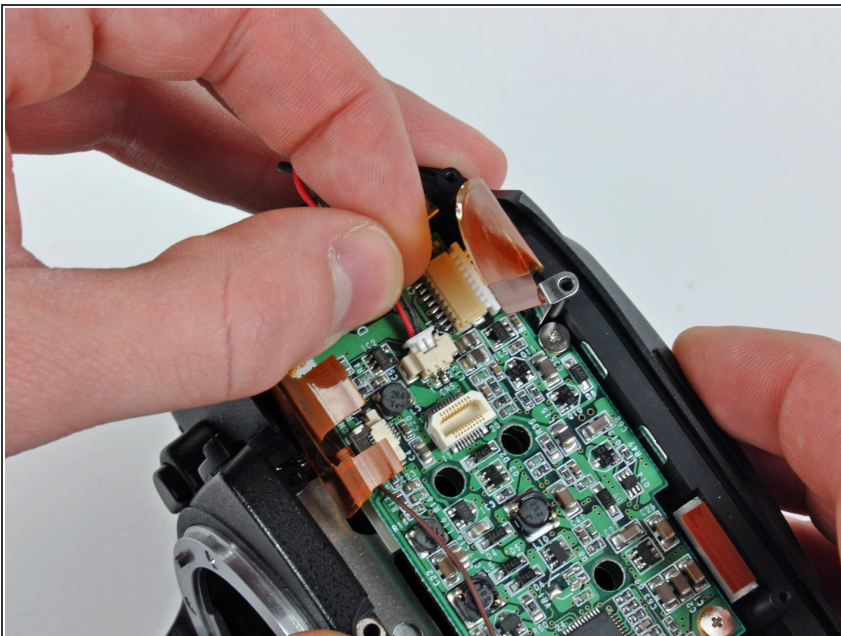

- Disconnect the DC-In board connector from the DC/DC board by pulling its connector away from the center of the board.





## Step 13

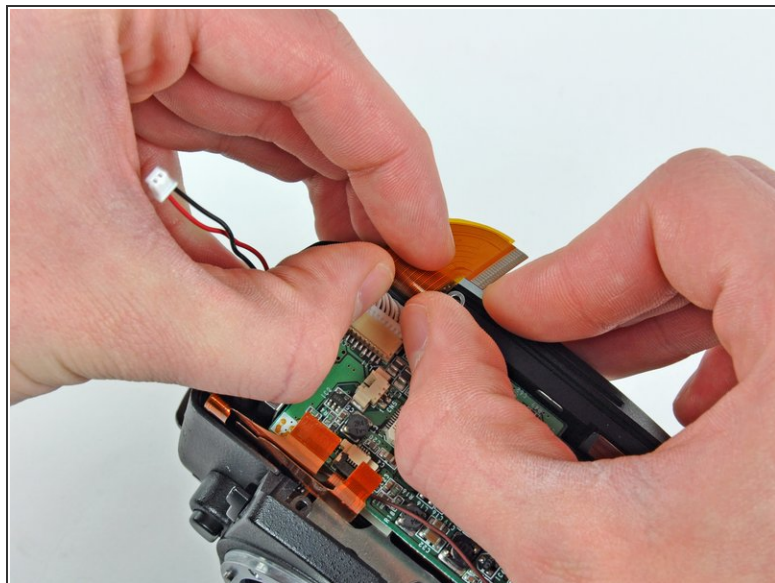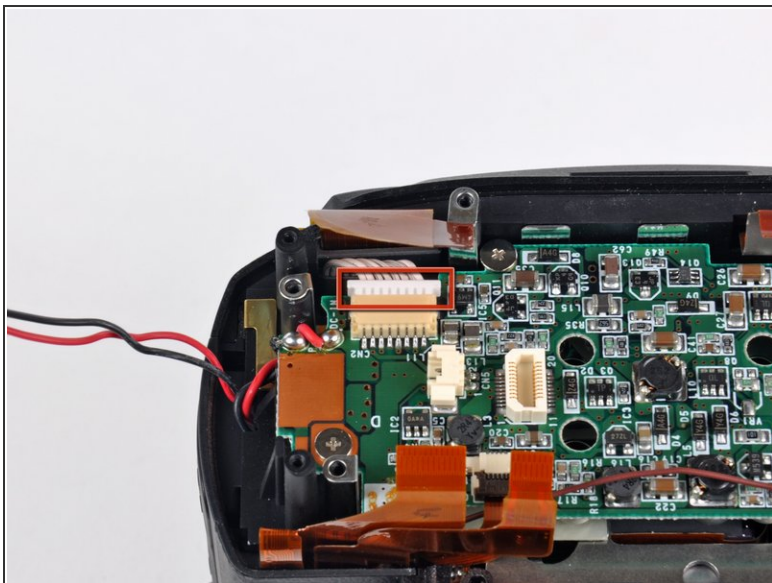

- Use your thumbnails to push the CCD connector out of its socket.

## Step 14

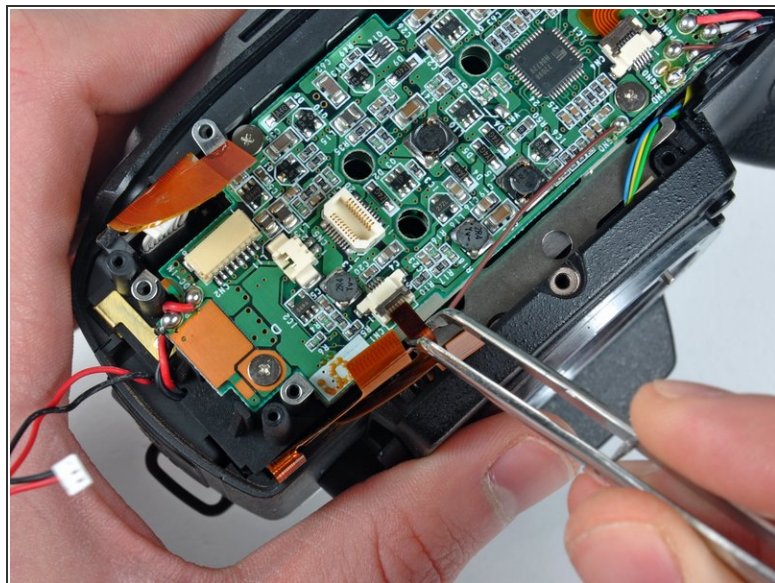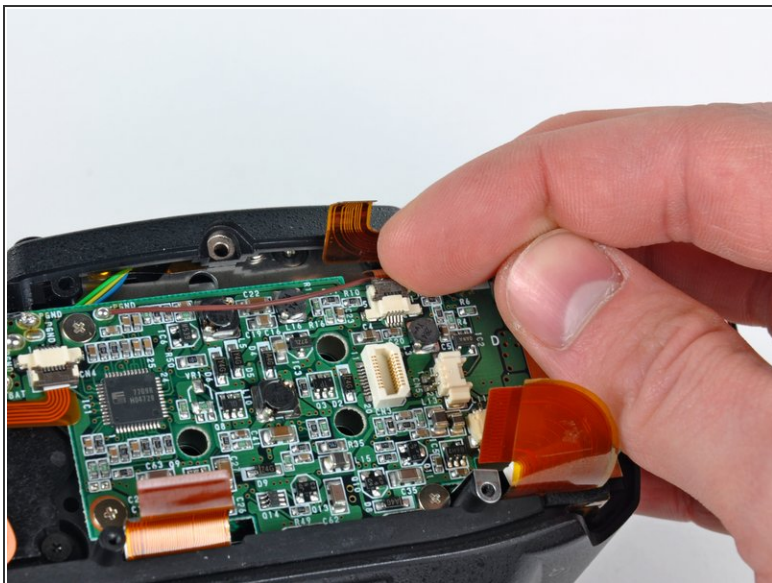


- Use your fingernail to carefully flip up the ZIF cable retaining flap for the ribbon cable socket near the front cover.

⚠ Be sure you are prying up on the movable cable retaining flap, **not** the socket itself.

- Use a pair of tweezers to carefully pull the ribbon cable out of its socket.




## Step 15

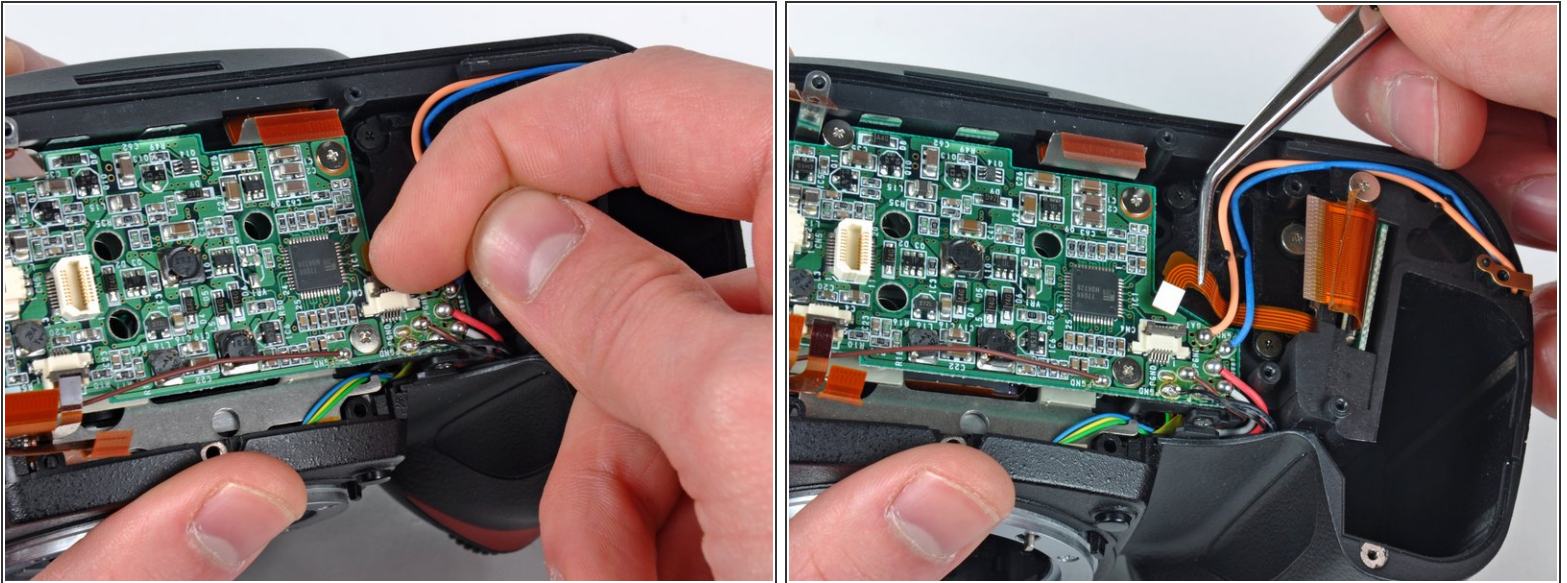


- Use your fingernail to flip up the ZIF cable retaining flap on the socket near the battery opening.
- ⚠ Be sure you are prying up on the movable cable retaining flap, **not** the socket itself.
- Use a pair of tweezers to pull the ribbon cable out of its socket.

## Step 16

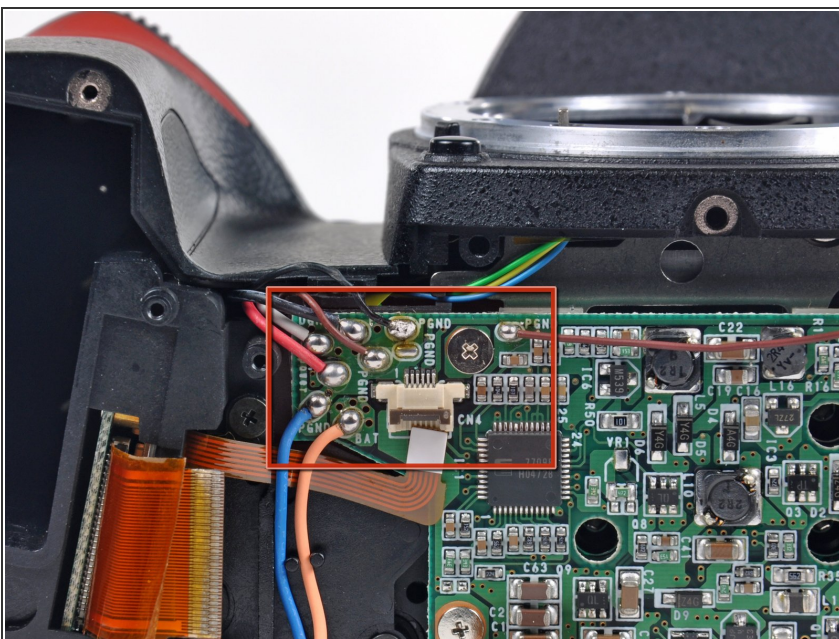

- Carefully de-solder the eight leads boxed in red.
- ⚠ Do not heat up the board excessively while de-soldering. There are many heat sensitive components mounted to the DC/DC board.
- ⓘ There are two black leads that look very similar. The thinner of the two connects closer to the center of the board.


## Step 17

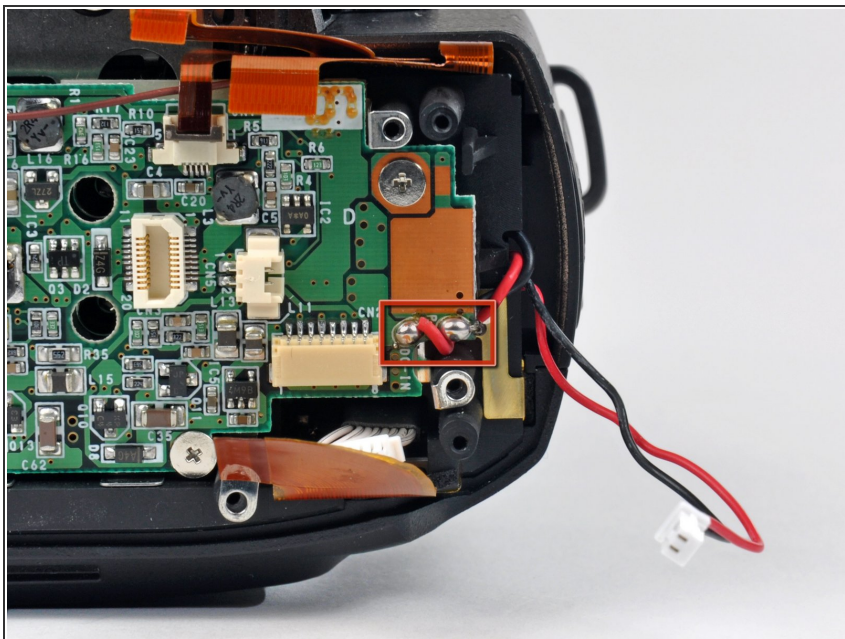

- De-solder the positive and negative DC-In leads (boxed in red) from the DC/DC board.

⚠ Do not heat up the board excessively while de-soldering the leads.


## Step 18

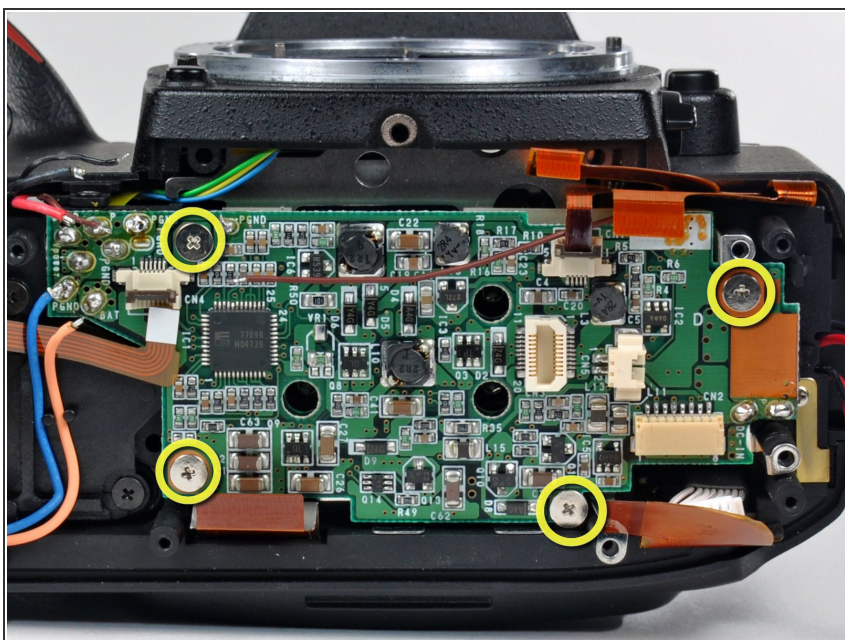

- Remove the four 4.2 mm Phillips screws securing the DC/DC board to the D70.



## Step 19

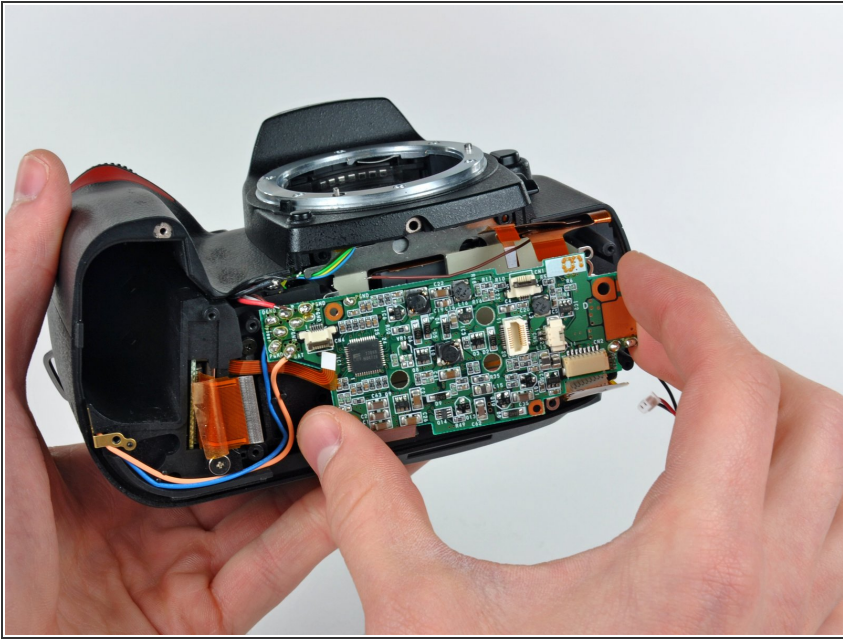

- Remove the DC/DC board from the D70, minding any cables that may get caught.

To reassemble your device, follow these instructions in reverse order.