



# Garmin Forerunner 25 Screen Replacement

The screen is a vital component to a digital...

Written By: Suzanne Drumm



# INTRODUCTION

The screen is a vital component to a digital smart watch. With the right tools, replacing the screen can be done efficiently and effectively.

## TOOLS:

Spudger (1)

T5 Torx Screwdriver (1)

T4 Torx Screwdriver (1)

iFixit Opening Tool (1)

## Step 1 — Battery



 **Power off your watch before disassembling it.**

- Place the watch on a hard surface with the screen facing down.
- Unscrew the four 7.0 mm screws located at each corner using a T5 screwdriver.

## Step 2



- Pry the old battery out using a plastic spudger.

## Step 3 — Motherboard



- Unscrew the two T4 6 mm screws located on both sides of the motherboard.


## Step 4



- Lift the motherboard up using a plastic spudger.

⚠ Ribbon cables are still attached underneath—be careful when prying the motherboard up.


## Step 5

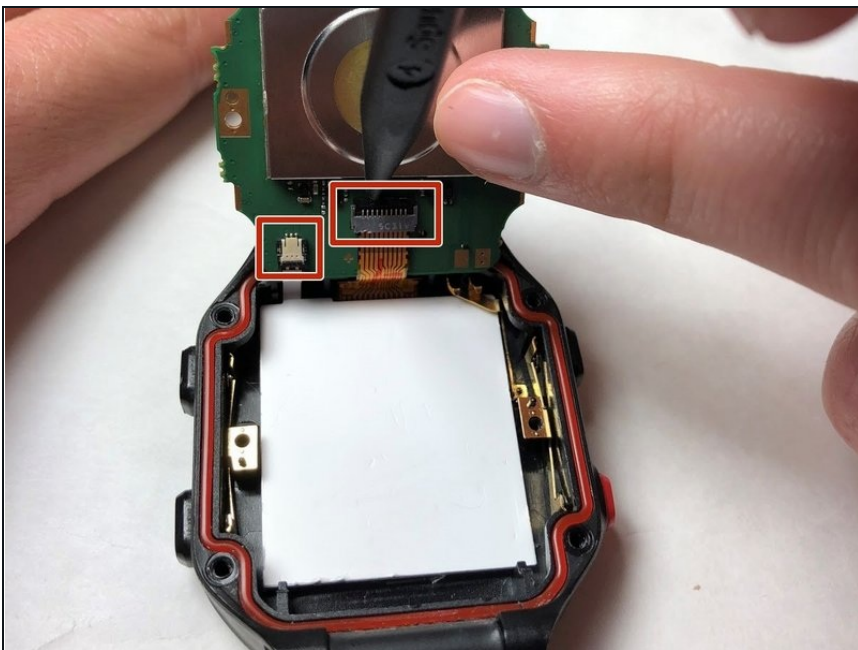

- Flip the ZIF connectors using a plastic spudger tool.
- Remove the motherboard.



## Step 6 — Screen

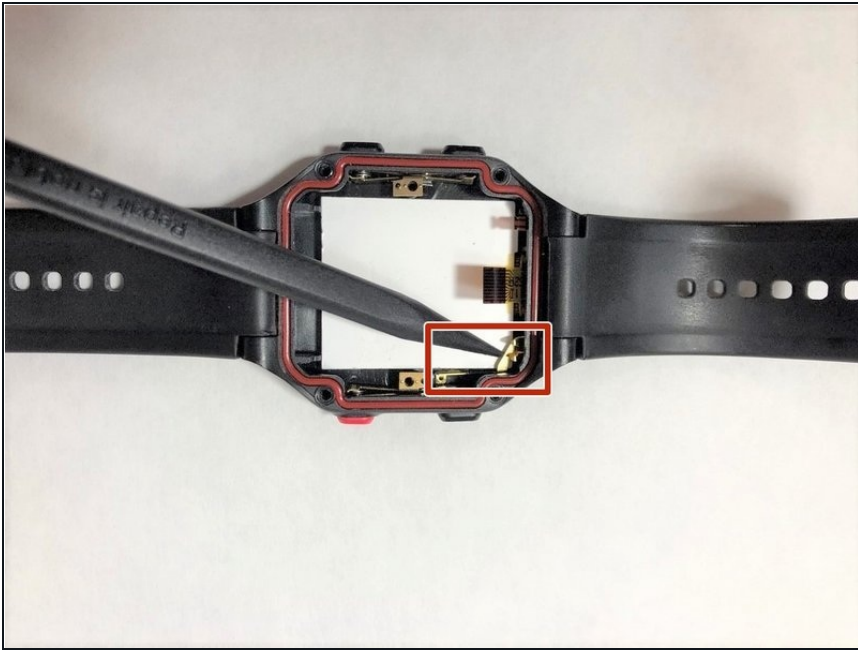

- Remove gold piece in the corner using the pointed side of the 4 spudger.
- ① Any spudger with a pointed end should work to remove this piece.

## Step 7



- Pry the screen up with a plastic opening tool.
- ① Any plastic tool with a flat edge should work to remove the screen.
- Remove the screen.

---

To reassemble your device, follow these instructions in reverse order.

